



Indoor Fixed LED Display Unit

Quick Start Guide

Legal Information

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING

NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Applicable Models

This guide is applicable to indoor fixed LED display unit.

Symbol Conventions

The symbols that may be found in this document are defined as follows.


Symbol	Description
 Note	Provides additional information to emphasize or supplement important points of the main text.
 Caution	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Danger	Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury.

Safety Instructions



- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- **CAUTION:** If the fuse of the device can be replaced, replace it only with the same model to reduce the risk of fire or electric shock.
- Do not touch the bare components (such as the metal contacts of the inlets) and wait for at least 5 minutes, since electricity may still exist after the device is powered off.
- For the permanently connected device without a disconnect equipment, a readily accessible disconnect equipment shall be incorporated into the electrical installation of the connected building.
- For the permanently connected device without an overcurrent protection equipment, an overcurrent protection equipment shall be incorporated into the electrical installation of the connected building. The specifications of the overcurrent protection equipment shall not exceed that of the building.
- For the permanently connected device without an all-pole mains switch, an all-pole mains switch shall be incorporated into the electrical installation of the connected building.
- For the device with the sign  indicating hazardous live, the external wiring connected to the terminals requires installation by an instructed person.
- Never place the device in an unstable location. The device may fall, causing serious personal injury or death.

- If the device supports wall mounting or ceiling mounting, the mounting surface shall be able to withstand the additional force of three times the weight of the device but not less than 50 N. The device and its associated mounting means shall remain secure during the installation. After the installation, the device, including any associated mounting plate, shall not be damaged. Refer to technical specifications for details.
- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the device.
- ALWAYS use furniture that can safely support the device.
- ALWAYS ensure the device is not overhanging the edge of the supporting furniture.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a device in an unstable location.
- NEVER place the device on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the device to a suitable support.
- NEVER place the device on cloth or other materials that may be located between the device and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the device or furniture on which the device is placed.

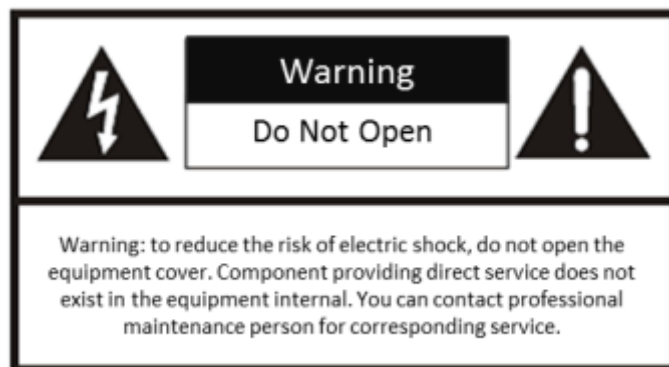

 Caution

- If the ingress protection level is lower than IPx4, the device shall not be exposed to water dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the device.
- Provide a surge suppressor at the inlet opening of the device under special conditions such as the mountain top, iron tower, and forest.
- If the device is powered by terminals connected to the power cord, ensure correct voltage and wiring of the terminals for connection to mains supply.
- No naked flame sources, such as lighted candles, should be placed on the device.
- For the device with ventilation openings, the ventilation openings should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, and curtains. The openings shall never be blocked by placing the device on a bed, sofa, rug, or other similar surface.

- This device is suitable for mounting on concrete or other non-combustible surface only to avoid fire hazard.
- For the device with sticker  or , pay attention to the following cautions:
- CAUTION: Hot parts! Do not touch. Burned fingers when handling the parts. Wait one-half hour after switching off before handling the parts.
- The power supply unit for the equipment must be placed in a restricted area to prevent unauthorized access.
- If the device installation is needed,
 1. Install the device according to the instructions in Quick Start Guide.
 2. To prevent injury, this device must be securely attached to the installation surface in accordance with the installation instructions. Refer to Quick Start Guide for details.
- Keep vertical when moving or using the device.
- CAUTION: If the bracket is designed for a specific device model of our company, use the bracket with the corresponding device only. Use with other devices may result in instability and cause injury.
- CAUTION: If the device needs to be installed with a specific bracket of our company, use the corresponding bracket only. Use others (such as carts, stands, and carriers) may result in instability and cause injury. Refer to the device datasheet for bracket model details. Refer to Quick Start Guide for details.
- The interface varies with the models. Please refer to the product datasheet for details.
- If the device is not released with a power adapter, and you need to wire the bare cables of the device:
 - The device external wiring connected to the hazardous live terminals requires installation by an instructed person.
 - Make sure that the power has been disconnected before you wire, install, or disassemble the device.
 - The power supply or device must be connected to an earthed mains socket-outlet.
 - High voltage for the power supply. Do not disassemble it.
 - If smoke, odor, or noise arises from the power supply or device, immediately turn off the power, unplug the power cable, and contact the service center.
 - If the device needs to be wired by yourself, select the corresponding wire to supply power according to the electric parameters labeled on the device. Strip off wire with a standard wire stripper at corresponding position. To avoid serious consequences, the length of stripped wire shall be appropriate, and conductors shall not be exposed.
- A circuit breaker shall be provided for the device externally. For a single device, an AC 220 V/230 V/240 V, 6 A circuit breaker is recommended. When multiple devices are stacked, select

a circuit breaker of appropriate rating based on the total rated current, but this shall not exceed the rating of the circuit breaker provided for the building.

TABLE OF CONTENTS

Chapter 1 Introduction	1
1.1 Overview	1
1.2 Product Components	1
Chapter 2 Rack Installation	2
2.1 About Rack	2
2.2 Install the Rack	2
2.2.1 Precautions	2
2.2.2 Install the Wall-Mounted Rack	2
Chapter 3 Cabinet Installation	8
3.1 Introduction	8
3.1.1 About the Cabinet	8
3.1.2 Load Capability of the Cabinet	8
3.1.3 Cabinet Overview	8
3.2 Install Cabinets	13
3.2.1 Precautions	13
3.2.2 Stitch Cabinet Frames	14
3.3 Connect the Power Cords and Network Cables	28
3.3.1 Connect the Power Cords	28
3.3.2 Connect the Network Cables	32
3.4 Install the Lamp Board	34
3.5 Maintain the Cabinet	46
3.5.1 Maintain the Lamp Board	46
3.5.2 Maintain the Power Supply	46
3.5.3 Maintain the Receiving Card	47
Chapter 4 Software Debugging	49
Chapter 5 Package Information	50
5.1 Packing List	50
5.2 Package	50
5.2.1 Package Dimension	50
Chapter 6 Warranty Policy	53
6.1 Warranty Scope	53
6.2 Warranty Period	53
6.3 Warranty Service	53
6.4 Warranty Service Types	53
6.4.1 Free and Remote Technical Support Service	53
6.4.2 Return to RMA Center for Repair Service	53
6.4.3 Repair Service Scope	54
6.4.4 Repair Time	54
6.4.5 Return Visit	54
6.4.6 Repair Conditions	54

6.5 Disclaimer	54
6.6 Process for Warranty Service.....	55
6.6.1 Remote Service Process	55
6.6.2 Process of Returning to RMA Center	55
6.7 General Terms.....	56

Chapter 1 Introduction

1.1 Overview

Indoor fixed LED display unit (hereinafter referred to as the device, the product, or the LED) is a high-precision product delivering clear and vivid images. It is featured by wide color gamut, stable performance, long service life, strong environmental adaption, cost effective and little cost to use. The device is applicable to scenes, such as radio and television stations, meeting room display, video surveillance, information display, etc.

1.2 Product Components

An LED control system includes sending and receiving cards. The sending card packages images and sends them to the receiving card. The receiving card unpackages and processes the images, and then displays the images on the LED display unit.

The center distance between two pixels is called pixel pitch. The smaller pixel pitch results in higher pixel density per unit area, higher resolution and higher cost. For example, P1.2 indicates 1.2 mm pixel pitch.

Our products are rack-mount system, so the installation process mainly involves rack installation and cabinet installation. The following sections describe how to install the rack and cabinet in details.

Chapter 2 Rack Installation

2.1 About Rack

There are two types of racks for installing our full-color LED products: all-in-one rack and wall-mounted rack. The wall-mounted rack is used for installing front-maintenance cabinets only. The all-in-one rack can be used for installing front-maintenance cabinets and back-maintenance cabinets.

2.2 Install the Rack

2.2.1 Precautions


- Installation personnel must wear protective gear.
- Take safety measures when working at heights.
- Make sure that the rack is mounted vertically to the flat ground without tilting or twisting.
- Check that all structural parts and fasteners are fully mounted without missing.
- After all the accessories are mounted, clean all the debris in the rack and avoid metal debris being remained.

2.2.2 Install the Wall-Mounted Rack

Step 1 Use a gradienter to determine the mounting position of the rack.

Step 2 Install the M6 × 60 expansion bolts into the wall and tighten the nuts in order to fix the rack onto the wall.

Wall-mounted Installation Holes

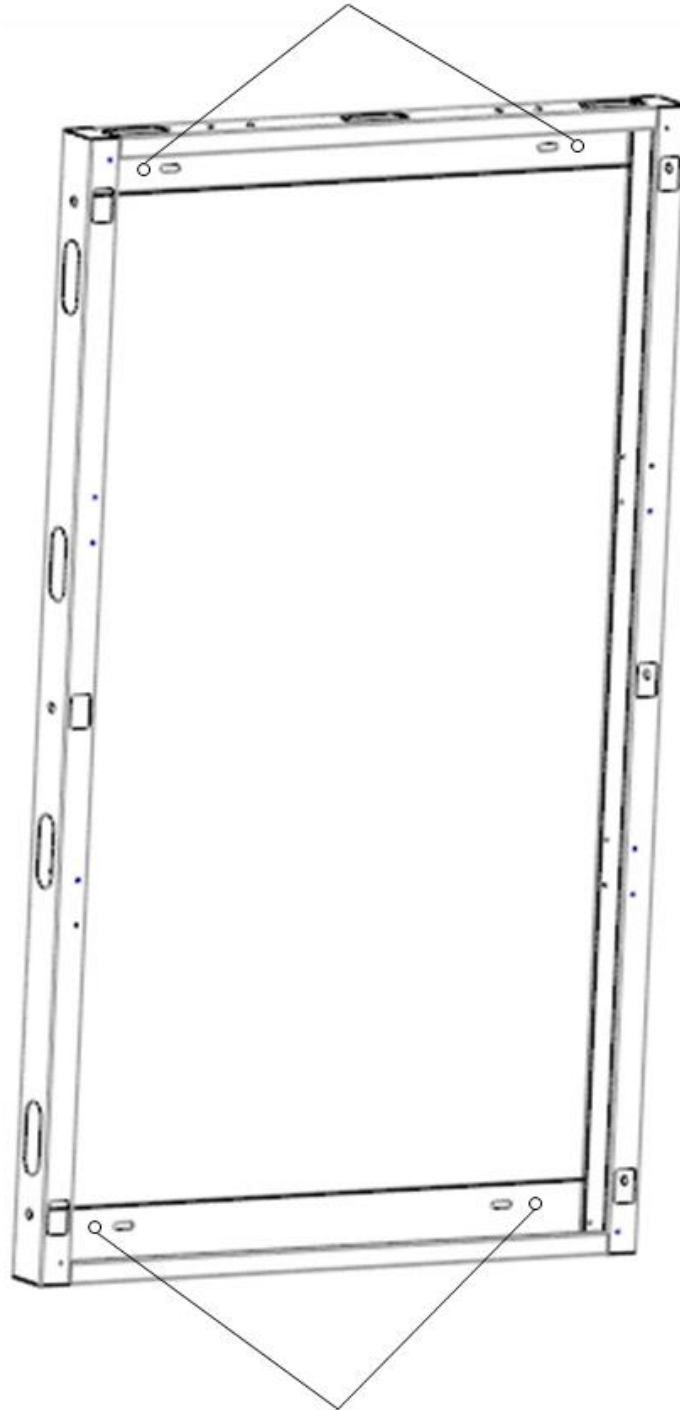

Wall-mounted Installation Holes

Figure 2-1 Wall-mounted Installation Holes on the Rack

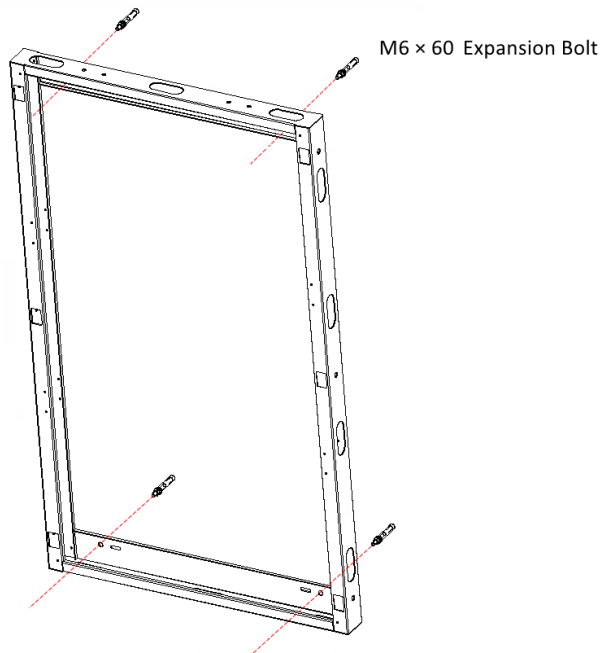


Figure 2-2 Install Wall-Mounted Rack onto the Wall

Step 3 Repeat step 1 and step 2 to install the remaining racks onto the wall.

Step 4 Use M6 x 20 screws to connect the adjacent racks. Align the horizontal or vertical installation holes with the same holes on the adjacent racks and then adjust the seams between the racks.

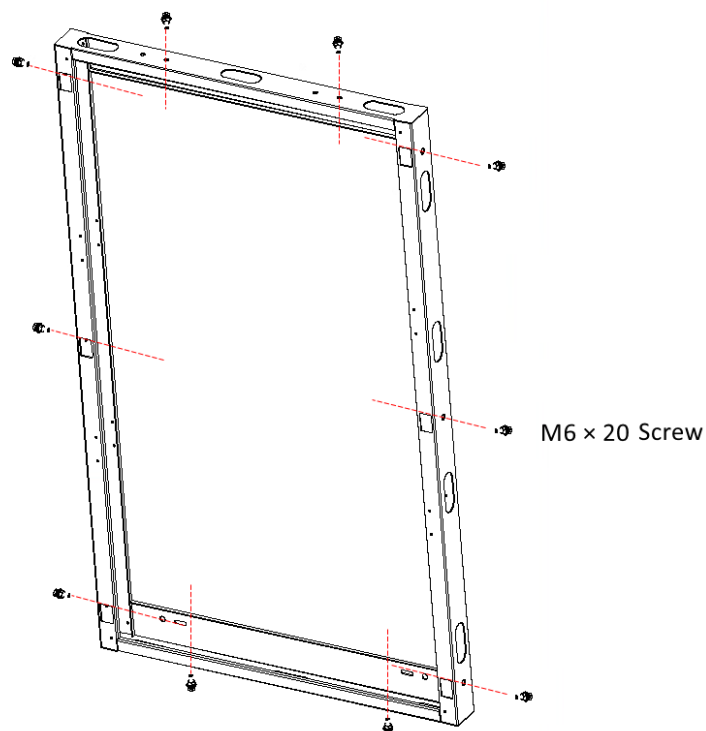


Figure 2-3 Horizontal and Vertical Installation Holes of the Rack

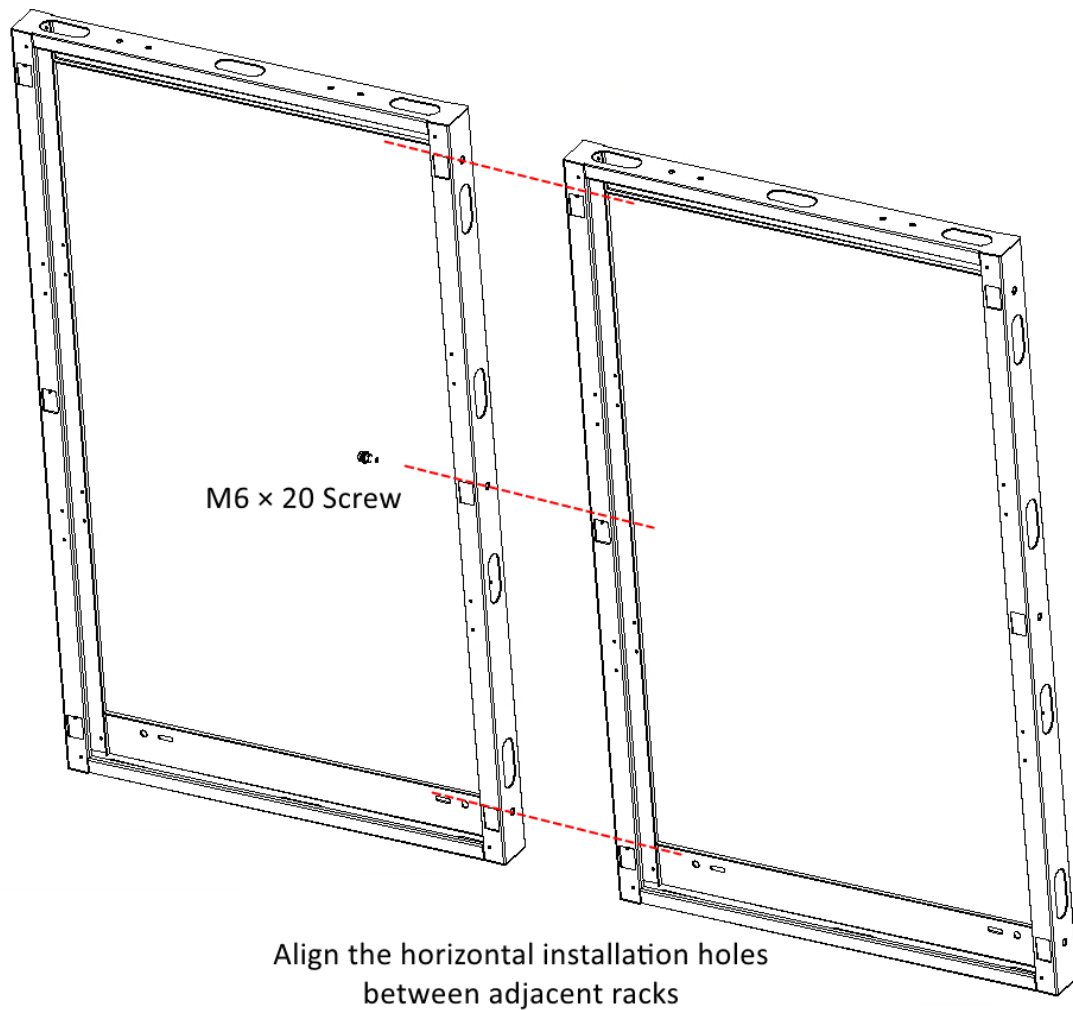


Figure 2-4 Stitch the Adjacent Racks Horizontally

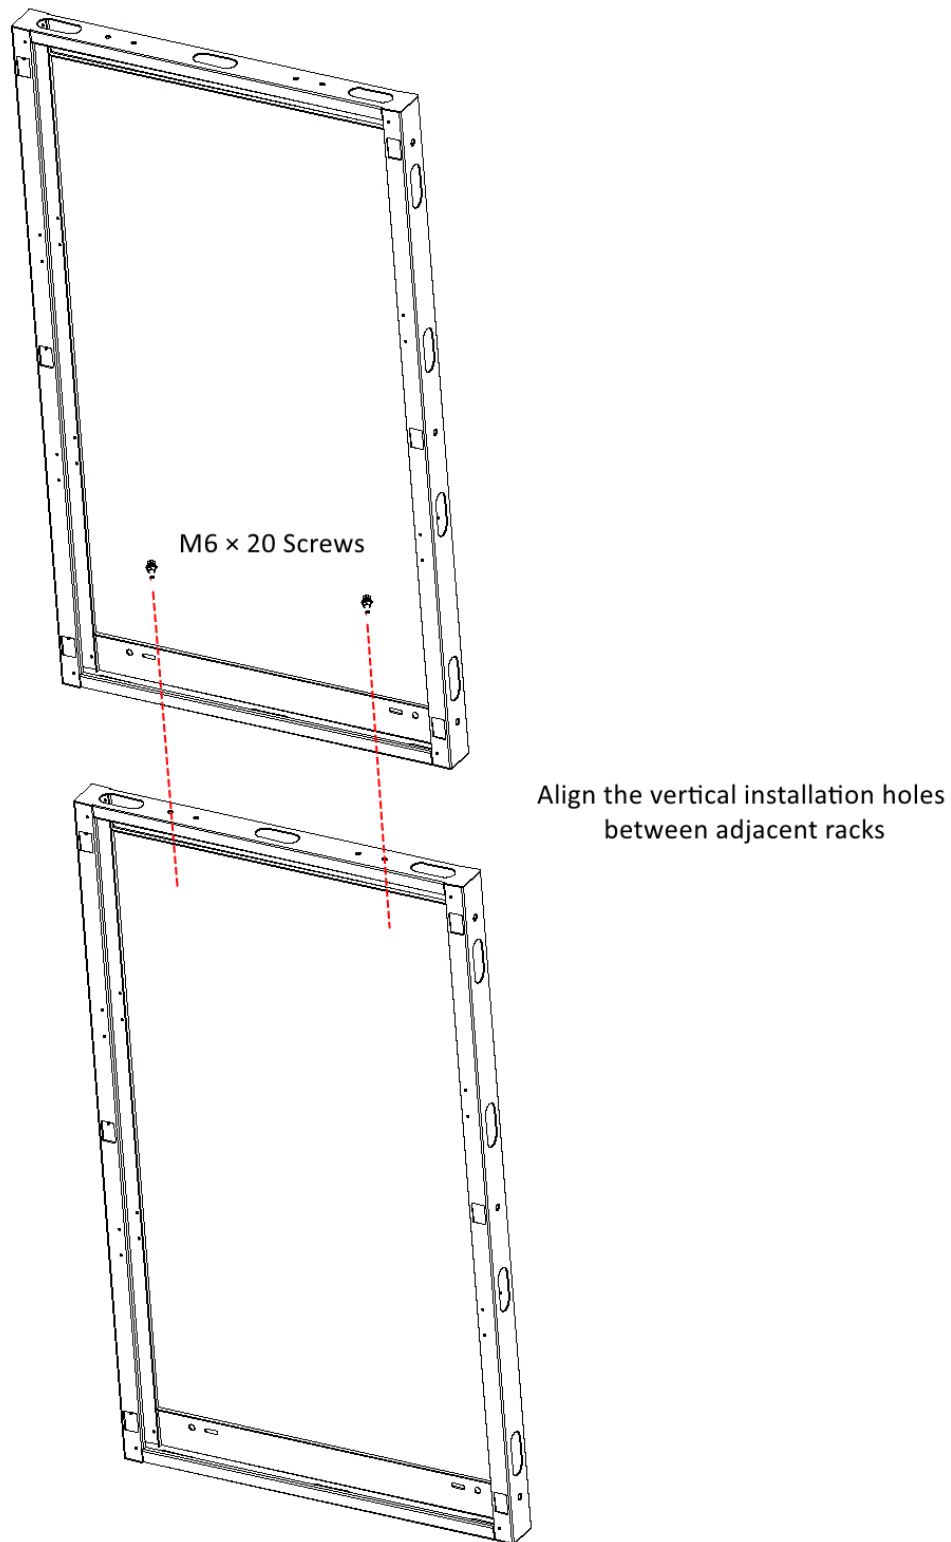


Figure 2-5 Stitch the Adjacent Racks Vertically

Step 5 Install the first cabinet from the center of the bottom row, and fix the cabinet onto the rack by using four ST4.8 × 50 self-tapping screws.

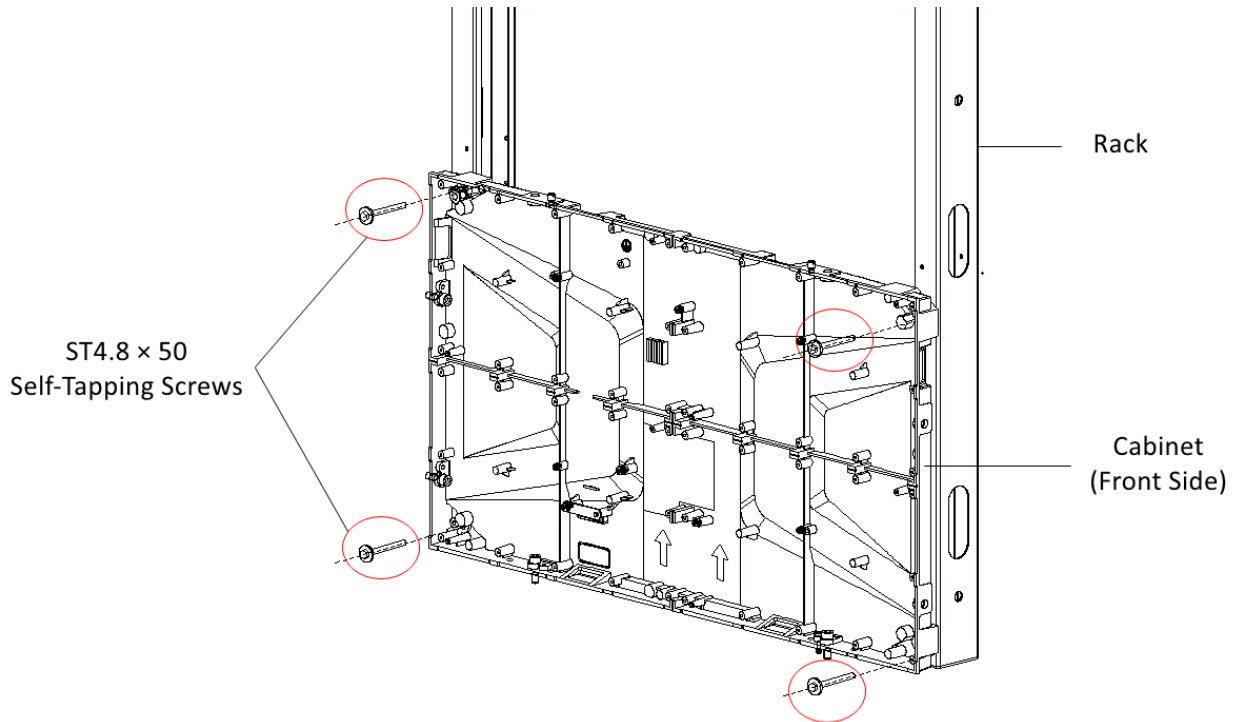


Figure 2-6 Fix the Cabinets with the Rack

Step 6 Install the remaining cabinets onto the racks from middle to both sides and from top to bottom. Use a gradienter to measure and ensure that the cabinets are flat and vertical after installation.

Note

- Do not fix the screws between the connectors and cabinets too tight for future adjustments.
- Pay attention to the leveling of frames and front lamp boards also need to be fine-tuned according to the actual situation to ensure that lamp boards are adjusted horizontally and seams are even and the joint distance is within the required range.
- Install the device no more than 5 mm away from the wall or other metal racks in case of lamp board drop resulting in electric shock.
- After installation, there should be no openings around the LED module. The bottom bracket under the wire outlet position should completely cover the bottom hole only to let the wire out, to prevent the molten material from dripping to the bottom during fire caused by internal failure.
- To ensure safety, the installation parts and the wall should support four times the weight of the device.

Chapter 3 Cabinet Installation

3.1 Introduction

3.1.1 About the Cabinet

A cabinet is a basic unit for LED engineer installation in which LED modules are neatly mounted on a metal sheet (cast aluminum) box, with a built-in independent receiving card and switching power supply, an engineering installation structure, and independent display.

3.1.2 Load Capability of the Cabinet

Load Capability of Network Interfaces

The load capability of a single network interface of the sending card is limited. You can calculate the max load of a single network interface by the following formula.

$$\text{Max Load of a Network Interface} = \text{Pixel Capacity of a Network Interface} / \text{Cabinet Resolution}$$

Example

If equipped with a sending card of 650,000 pixels, the max load of a single network interface for a P1.2 cabinet of 480 × 270 resolution is 5 cabinets.



Note

You can choose sending cards of different pixels and cabinets of different resolution, and calculate the load capability by the formula.

Load Capability of Power Cords

The load capability of a single power cord is limited. You can calculate the max load of a single power cord by the following formula.

$$\text{Max Load of a Single Power cord} = \text{Power of the Cord} / \text{Power of the Cabinet}$$



Note

You can choose power cords and cabinets of different specifications, and calculate the load capability by the formula.

3.1.3 Cabinet Overview

There are four types of cabinets in total.

Table 3-1 Cabinet Specification

Type	Cabinet Dimensions (W × H × D)	Lamp Boards Amount	Pixel Pitch	Cabinet Resolution
1	1000 mm × 250 mm × 50 mm	4	P1.5	640 × 160
			P1.9	512 × 128
			P2.6	384 × 96
			P2.9	336 × 84
			P3.9	256 × 64
2	750 mm × 250 mm × 50 mm	3	P1.5	480 × 160
			P1.9	384 × 128
			P2.6	288 × 96
			P2.9	252 × 84
			P3.9	192 × 64
3	1000 mm × 500 mm × 50 mm	8	P1.5	640 × 320
			P1.9	512 × 256
			P2.6	384 × 192
			P2.9	336 × 168
			P3.9	256 × 128
4	500 mm × 500 mm × 50 mm	4	P1.5	320 × 320
			P1.9	256 × 256
			P2.6	192 × 192
			P2.9	168 × 168
			P3.9	128 × 128

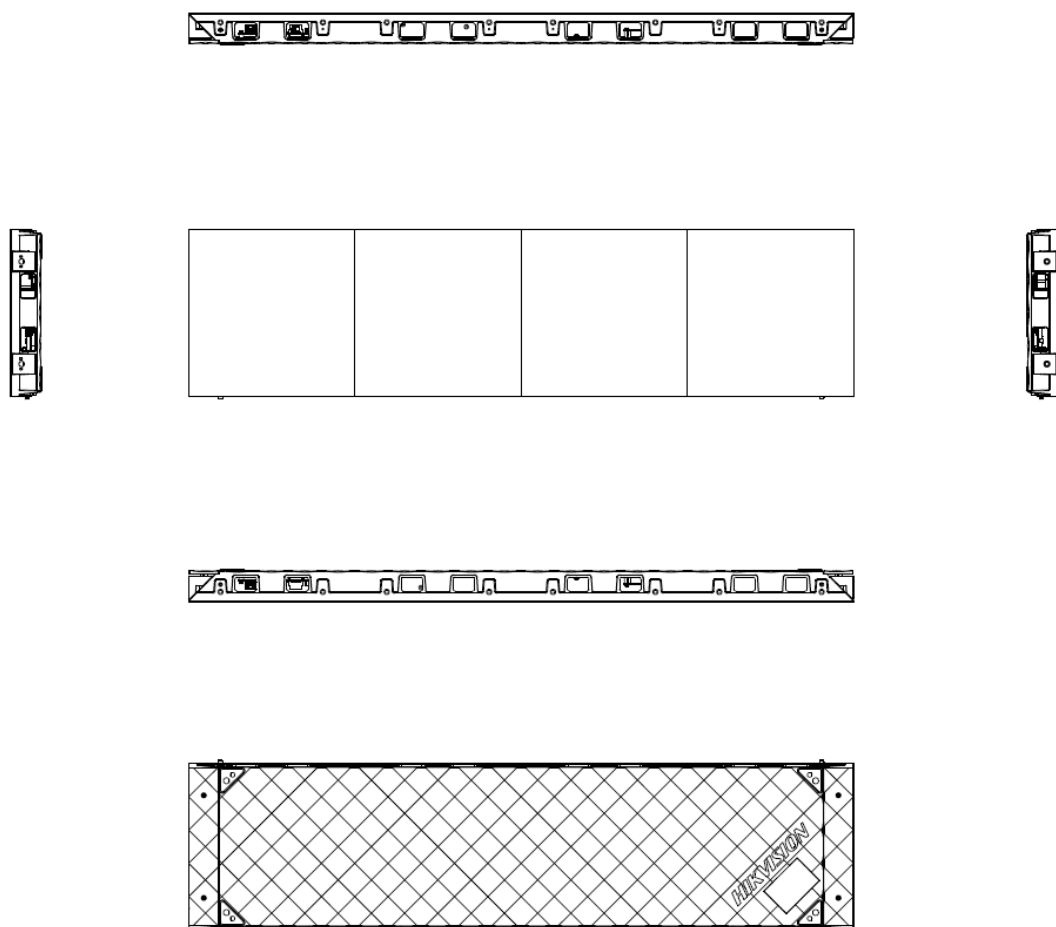


Figure 3-1 Cabinet 1 (1000 mm × 250 mm × 50 mm)

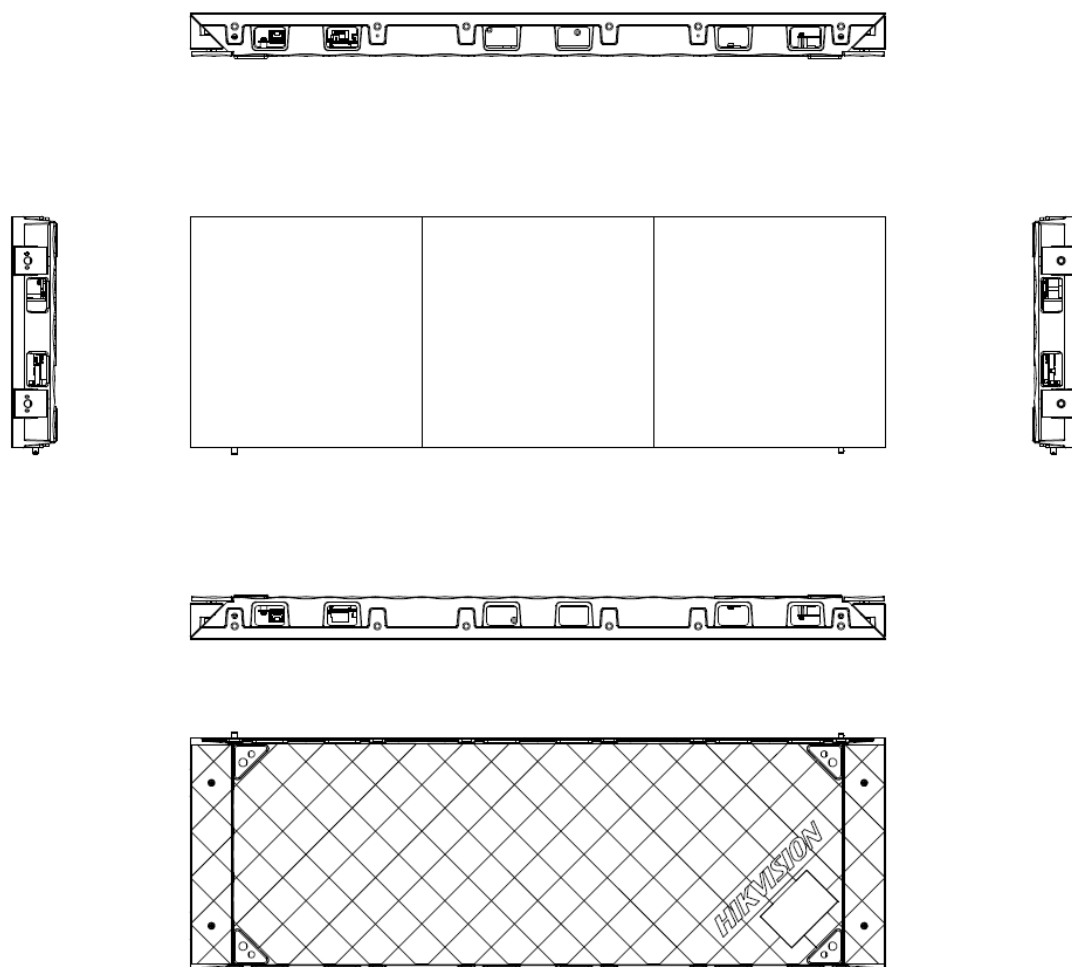


Figure 3-2 Cabinet 2 (750 mm × 250 mm × 50 mm)

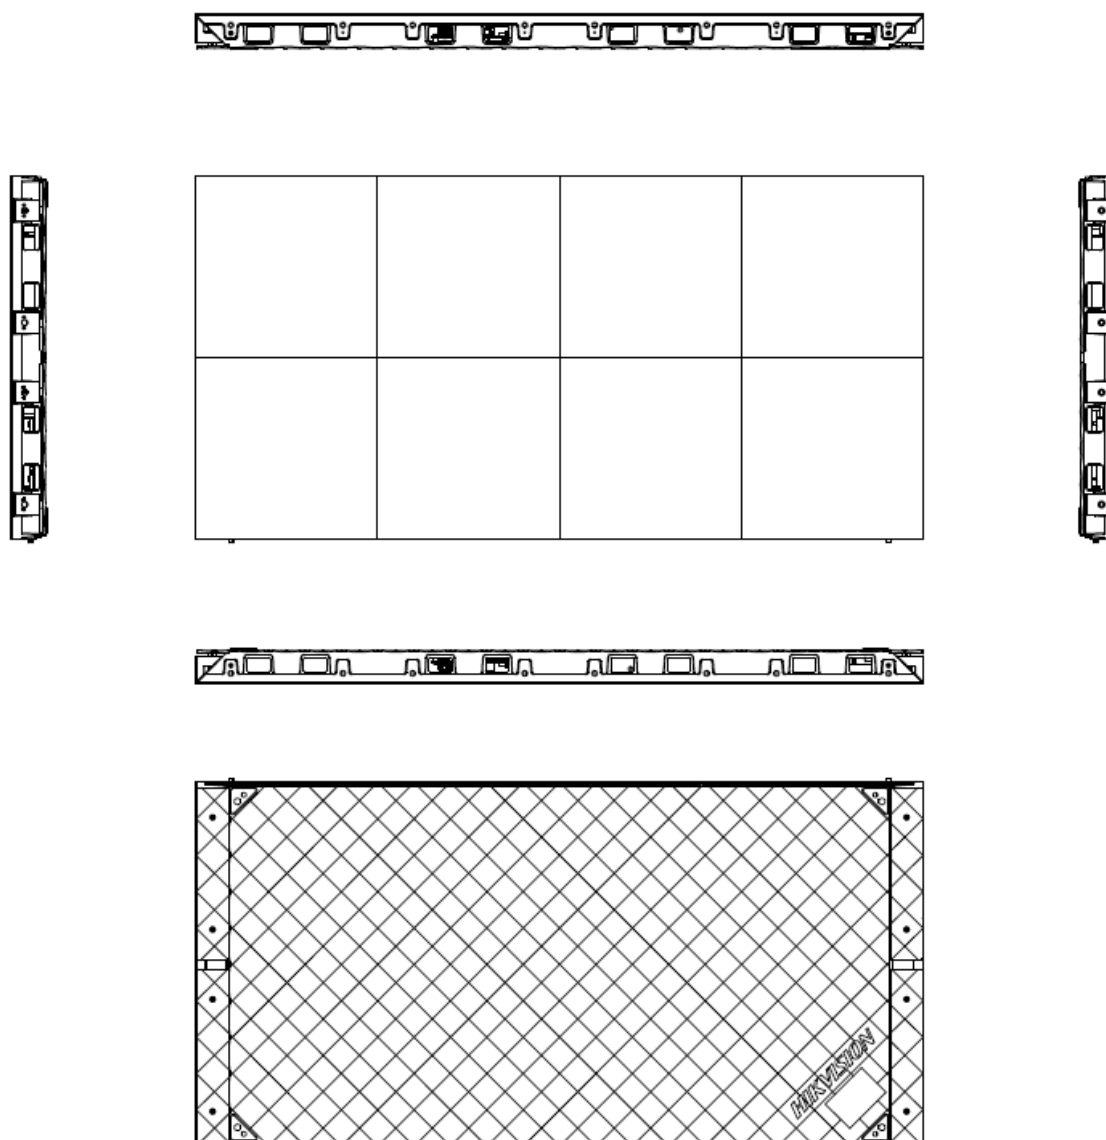


Figure 3-3 Cabinet 3 (1000 mm × 500 mm × 50 mm)

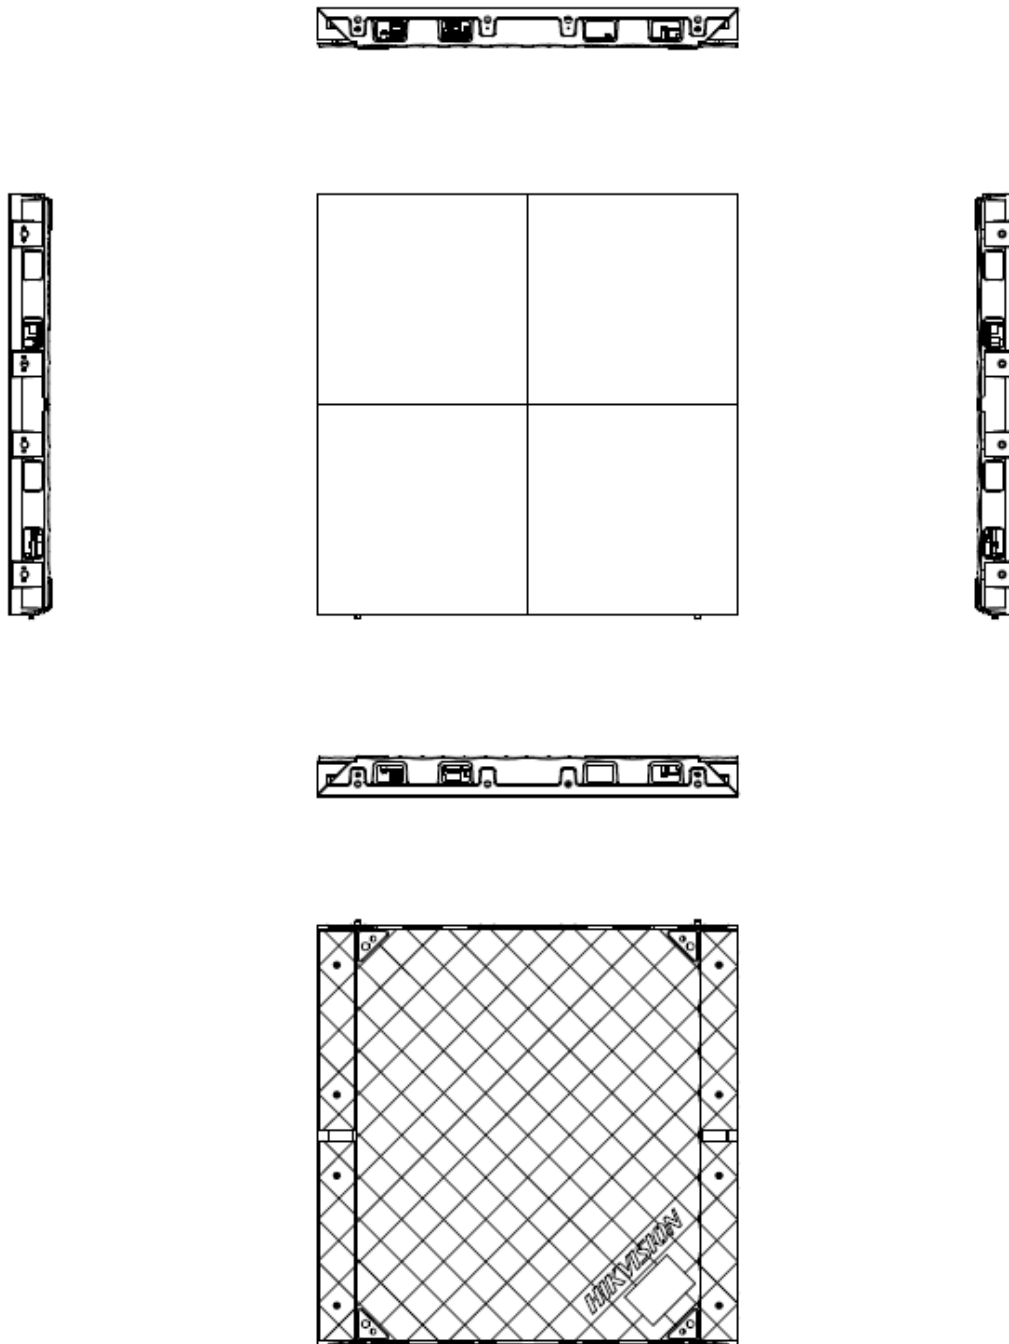


Figure 3-4 Cabinet 4 (500 mm × 500 mm × 50 mm)

3.2 Install Cabinets

3.2.1 Precautions

Read the following precaution tips before you install the LED screens:

- Install the LED screens after the decoration construction is completed.

- Avoid humid or high-PH environment to prevent damage to the LED lamps.
- Do not expose the device to rain or humid environment to reduce the risk of fire or electric shock.
- Electric discharge may last for a short period of time after the power is shut down. Please wait two minutes after the power is shut down to operate the device.
- Only use the original power cord delivered with the device. Contact authorized dealer to purchase power cord with same specifications.
- Please do not frequently plug and unplug the power cord when the power is on.

3.2.2 Stitch Cabinet Frames

Cabinet Frame Locating

Align two cabinet frames with the locating studs, locating holes, and installation holes. Single cabinet frame is equipped with two locating studs, two locating holes, two sets of horizontal installation holes, and several sets of vertical installation holes.

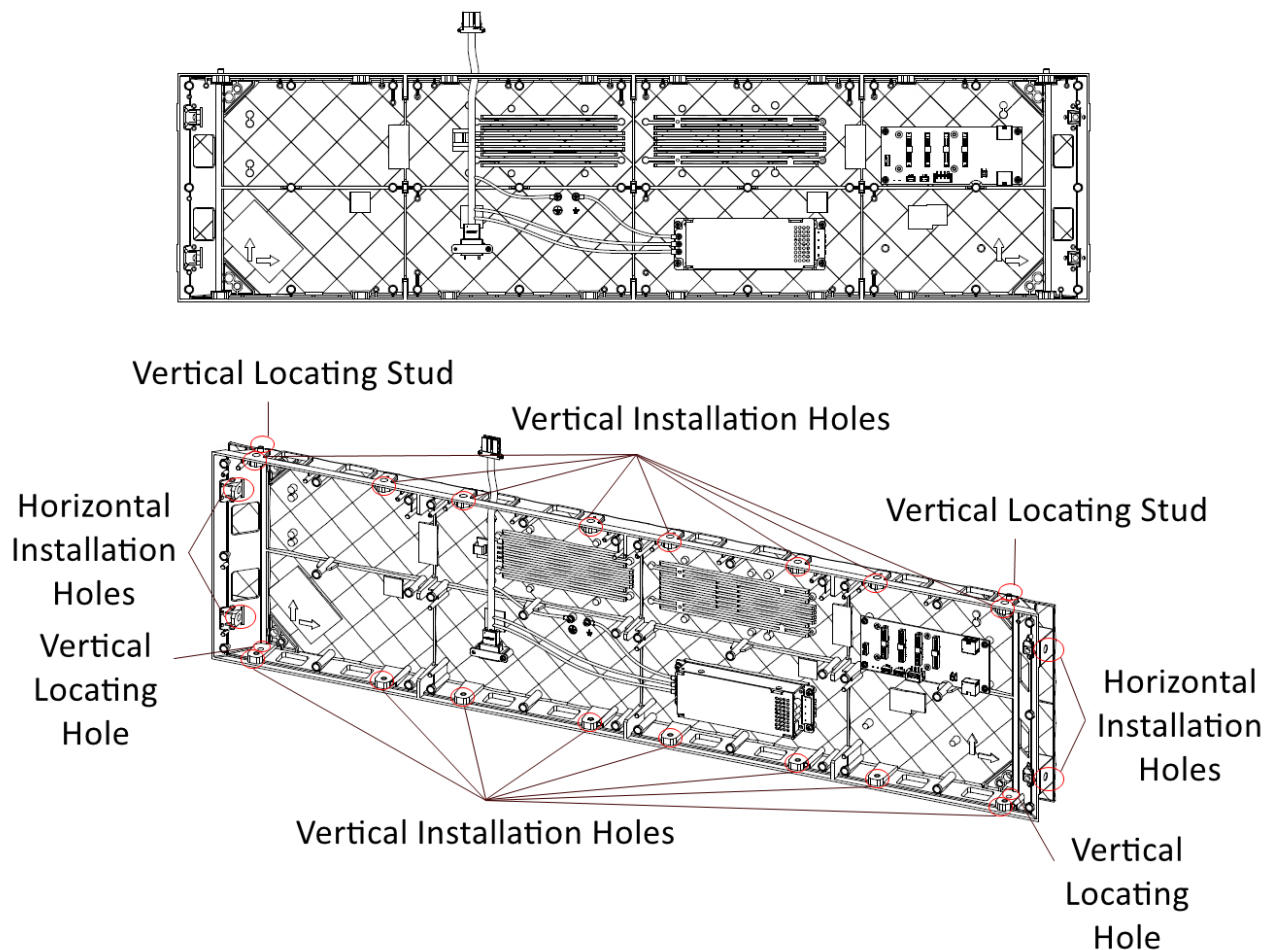


Figure 3-5 Cabinet Frame Appearance

Select the Stitching Direction of Cabinet Frames

The installation direction is marked on the cabinet frame. You can select the stitching direction of the cabinet frame based on your real needs.

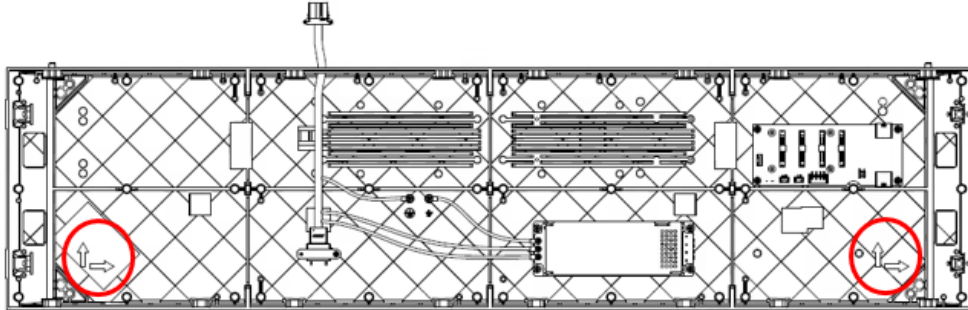


Figure 3-6 Stitching Direction of Cabinets

Stitch Cabinet Frames Horizontally

Step 1 Align the installation holes in the horizontal direction of the two adjacent frames, and adjust the cabinet frames to the relative height.

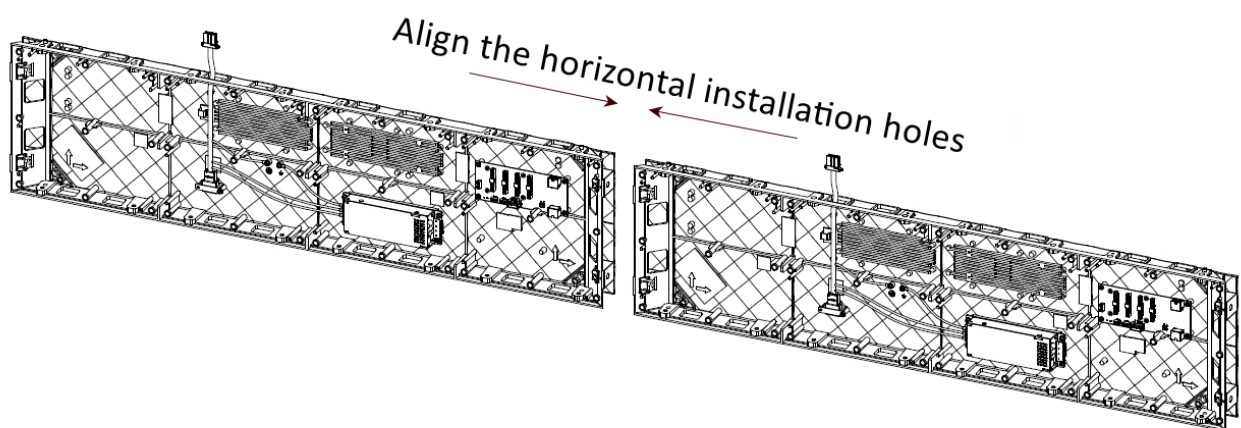


Figure 3-7 Align the Cabinets Horizontally

Step 2 Insert the M6 screws from right to left into the horizontal installation holes.

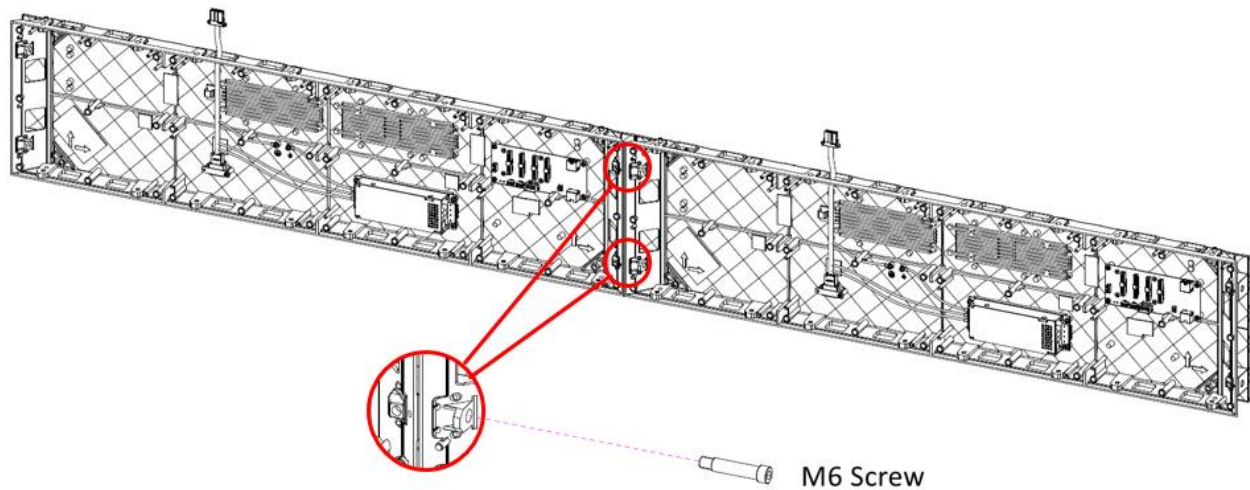


Figure 3-8 Fix the Cabinet Frames

Step 3 After the seams between the two cabinet frames have been adjusted, use a hex wrench to fasten the M6 screws.

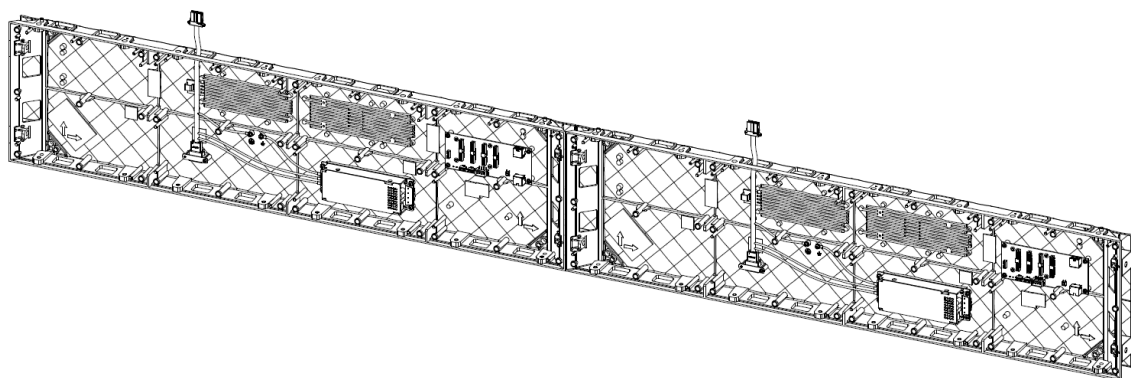


Figure 3-9 Finish the Horizontal Stitching

Step 4 Repeat the above steps to complete the horizontal stitching of remaining cabinet frames.

Stitch Cabinet Frames Vertically

Step 1 Insert the power output Interface of the lower cabinet through the wiring hole of the adjacent cabinet and into the power input connector of the adjacent cabinet.

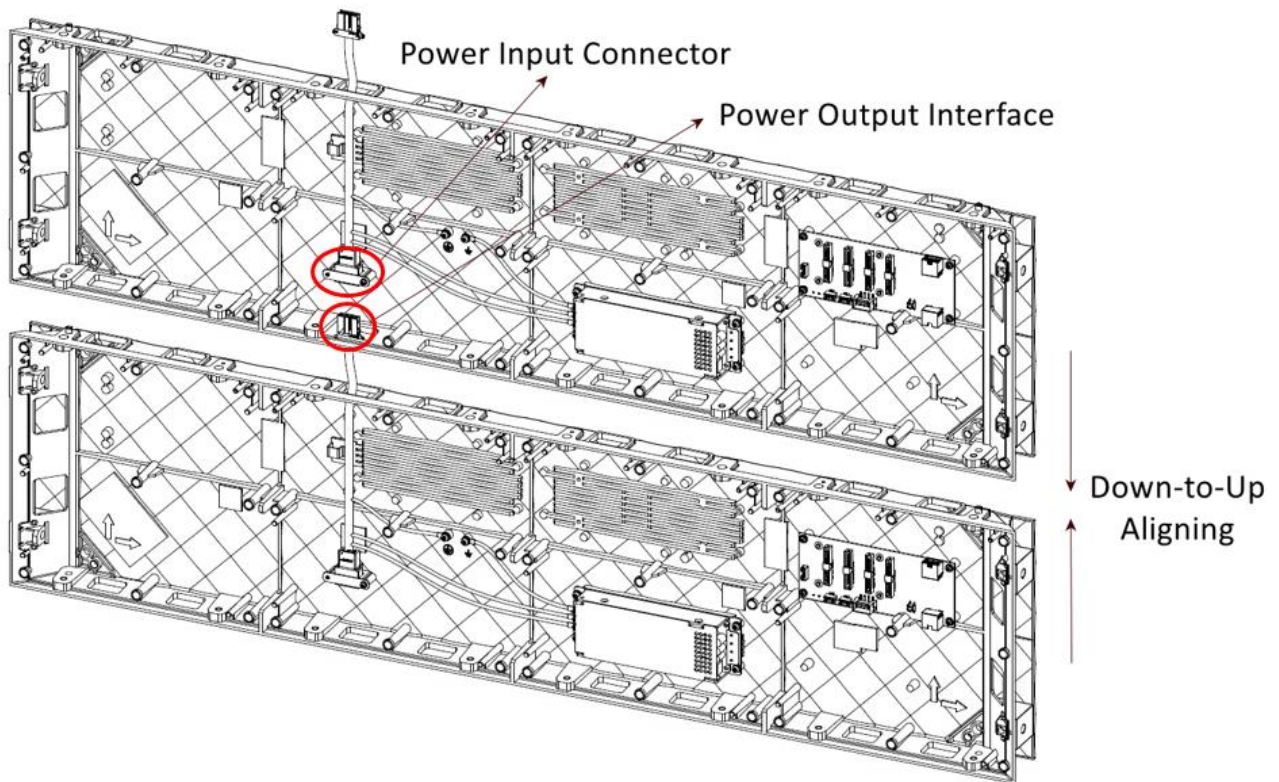


Figure 3-10 Connect the Power Output Interface

Step 2 Align the locating studs in the vertical direction of the two adjacent cabinet frames to the locating holes, and adjust the cabinet frames vertically against each other.

Step 3 Insert the M6 screws from bottom to top into the vertical installation holes.

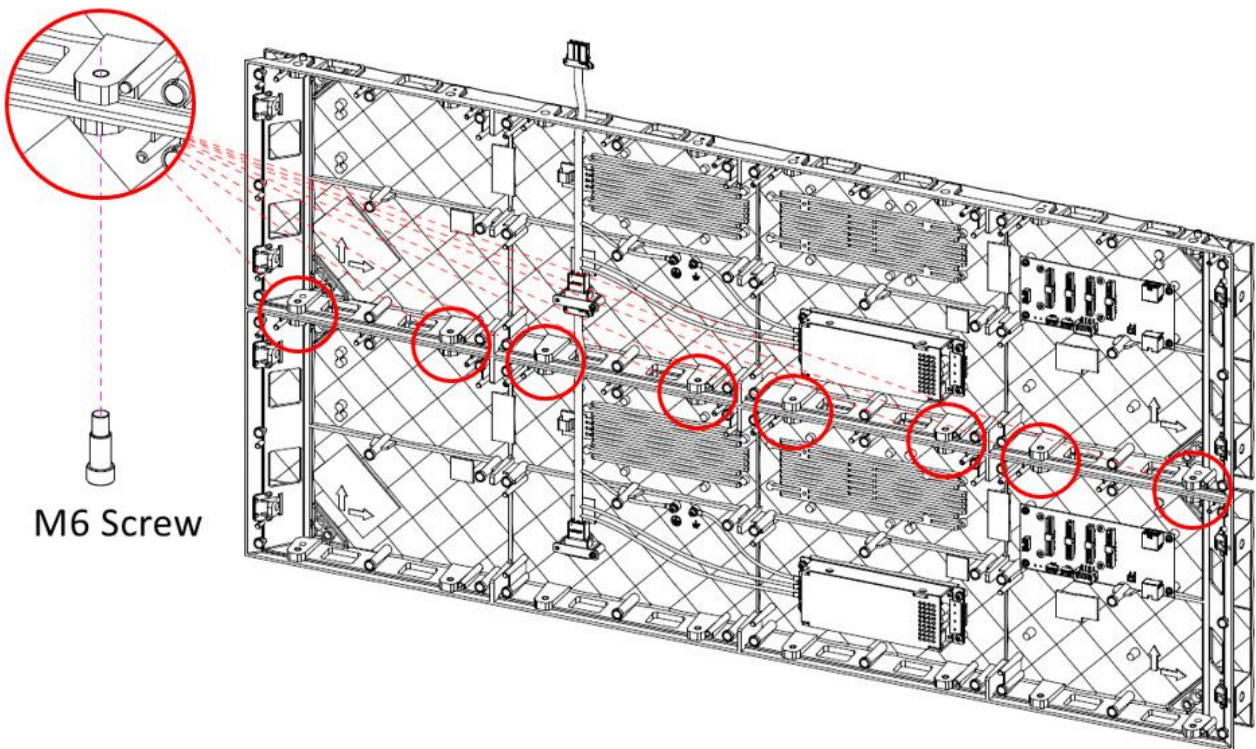


Figure 3-11 Fix the Cabinet Frames

Step 4 After the seams between the two cabinet frames have been adjusted, use a hex wrench to fasten the M6 screws.

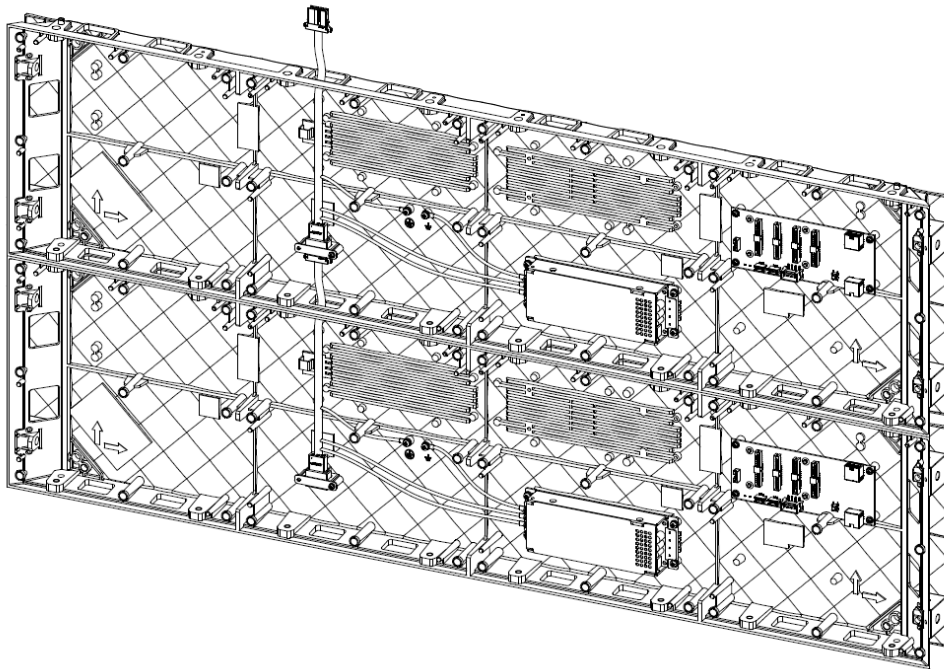


Figure 3-12 Finish the Vertical Stitching

Step 5 Repeat the above steps to complete the vertical stitching of remaining cabinet frames.

Stitch Cabinet Frames to a 90° Right Angle

Step 1 Use a screwdriver to remove the screws securing the cover plates and blocks on both sides of the cabinet.

Step 2 Repeat the above steps to remove the cover plates and blocks on both sides of the other cabinet.

Step 3 Adjust the two cabinet frames to a 90° right angle by bringing the short sides of the two cabinet frames close together and aligning the four installation holes of the frames.

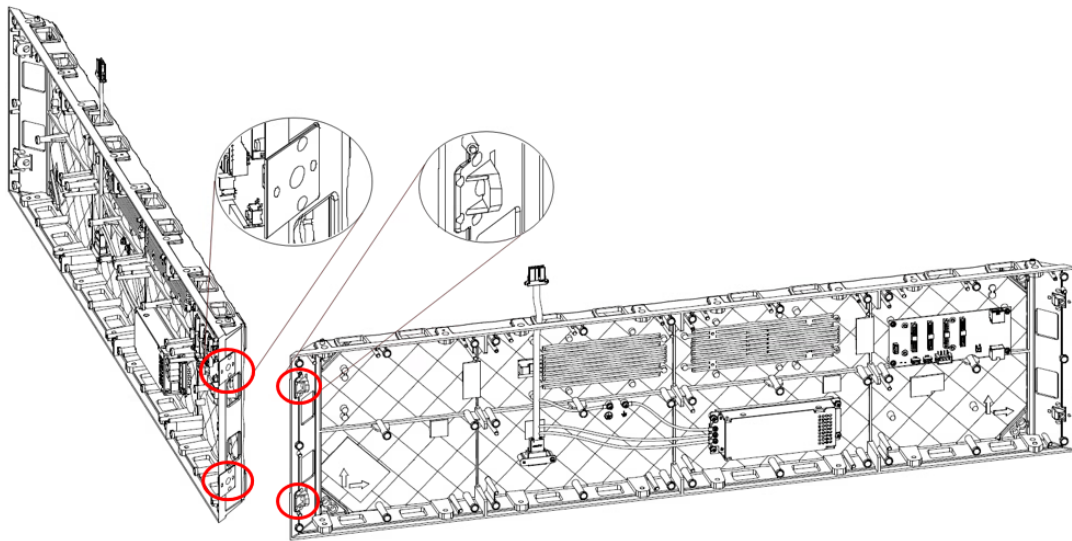


Figure 3-13 Adjust the Two Cabinet Frames to A Right Angle

Step 4 Insert the M6 screws from right to left into the horizontal installation holes.

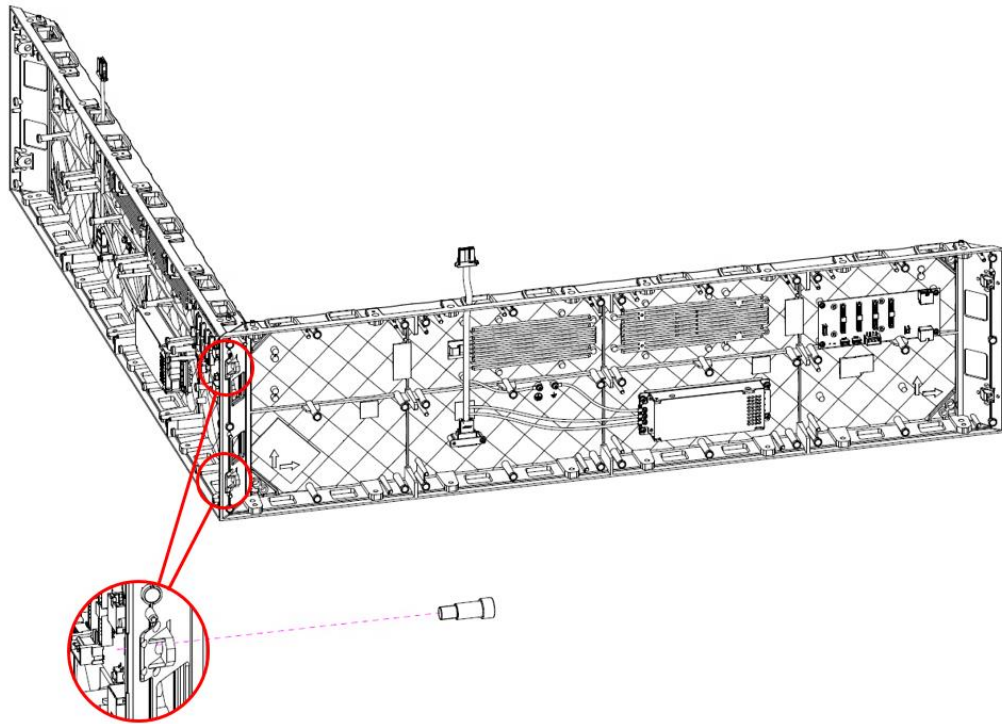


Figure 3-14 Fix the Cabinet Frames

Step 5 After the seams between the two cabinet frames have been adjusted, use the hex wrench to tighten the screws to complete the 90° right-angle stitching between the cabinet frames of the first row at the bottom.

Step 6 Repeat the above steps and stitch cabinet frames vertically to complete the 90° right angle stitching between the remaining rows of cabinet frames.

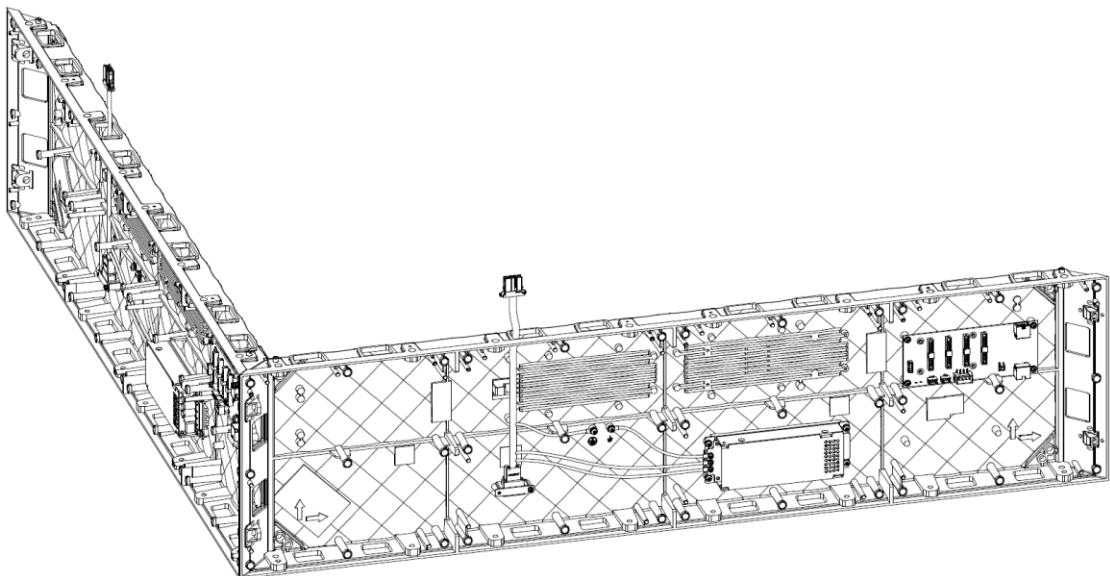


Figure 3-15 Finish the 90° Right Angle Stitching of Cabinet Frames

Rotate and Stitch Cabinet Frames

You can rotate and stitch cabinet frames horizontally.

Step 1 Align the installation holes in the horizontal direction of the two adjacent frames, and adjust the cabinet frames to the relative height. Connect the power cord and network cable internally.

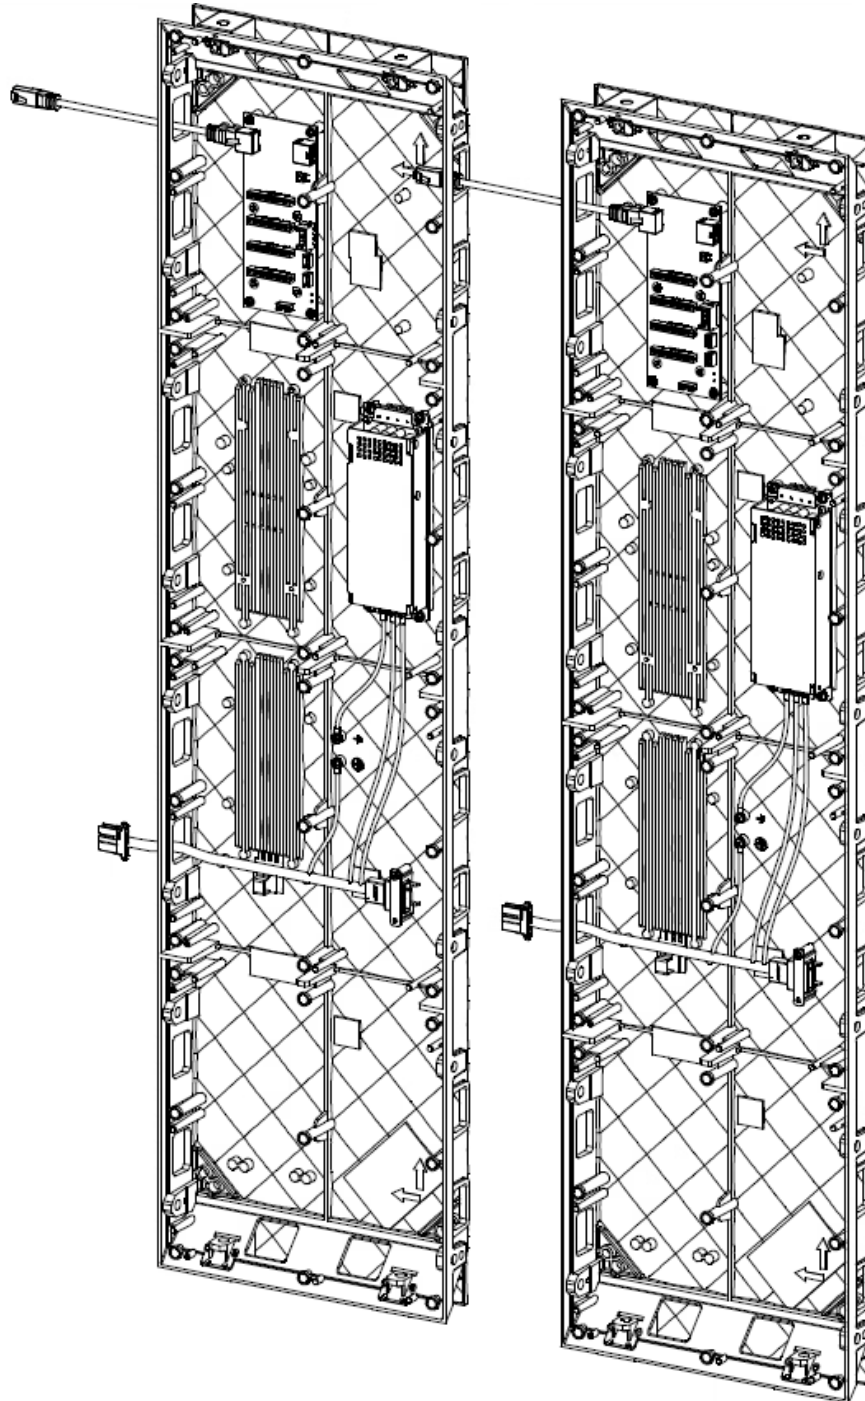


Figure 3-16 Connect the Power Cord and Network Cable Internally

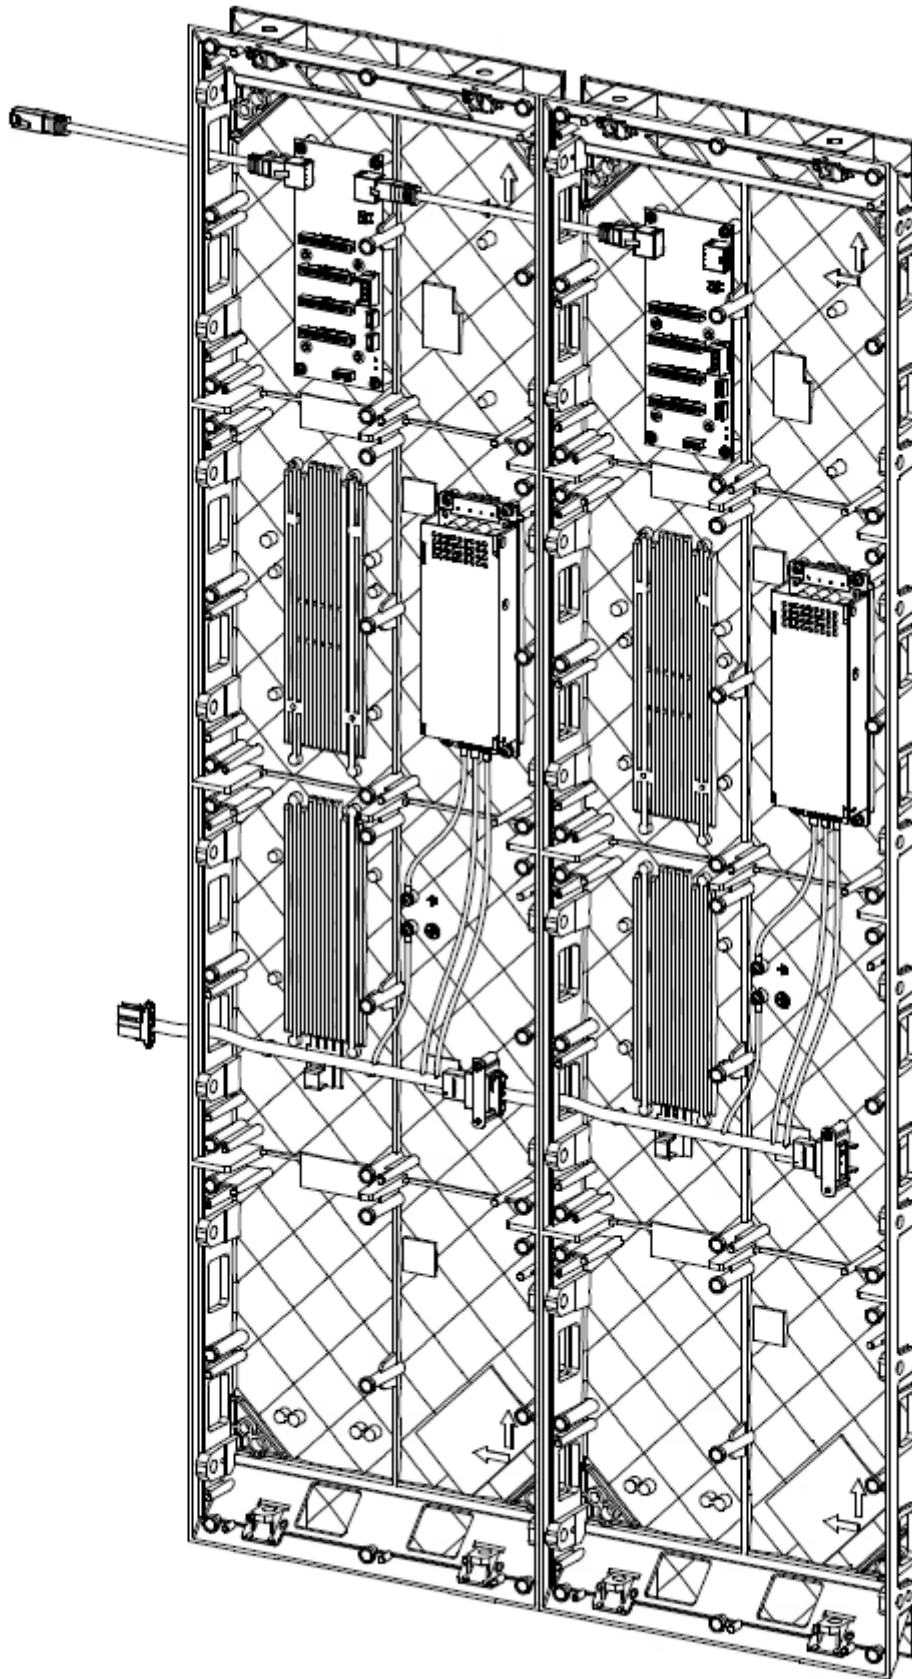


Figure 3-17 Finish the Internal Connection of Power Cord and Network Cable

Step 2 Insert the M6 screws from right to left into the installation holes.

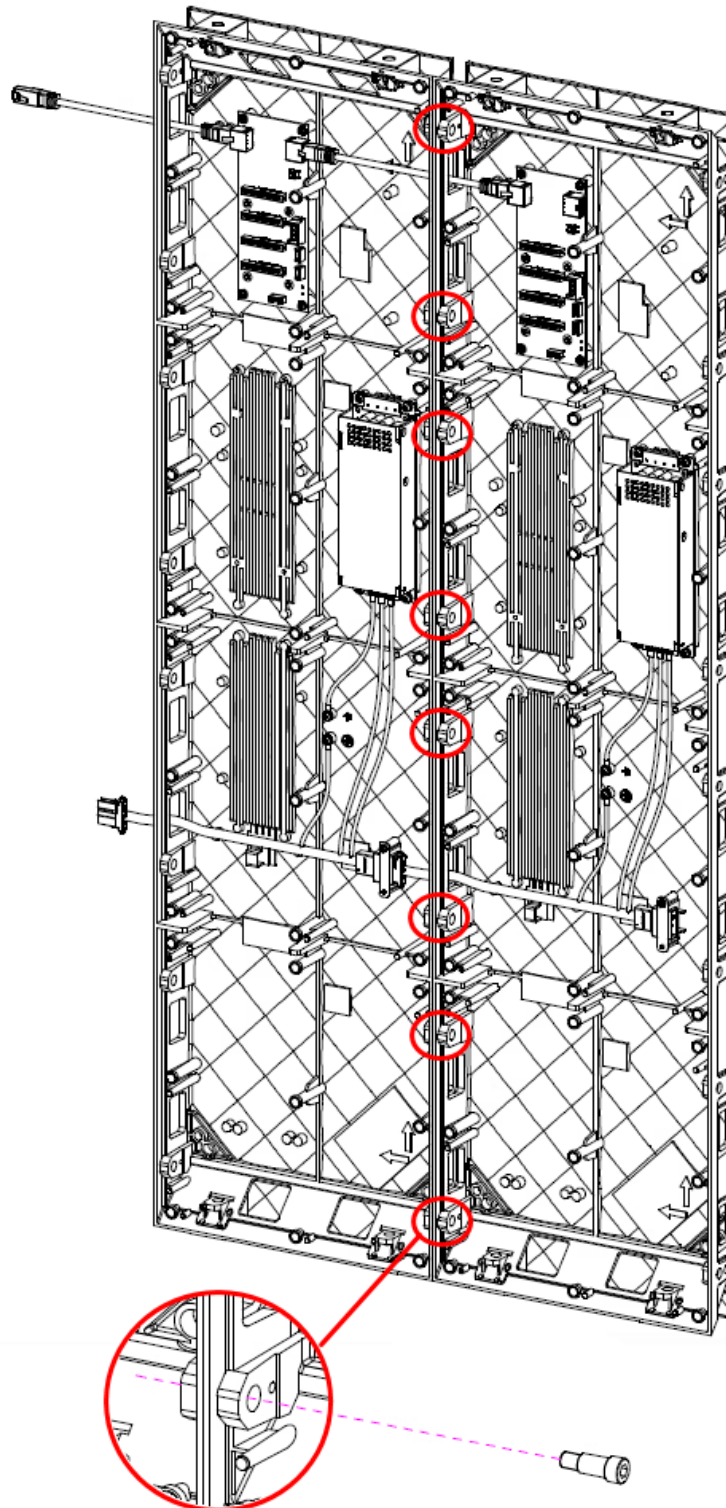


Figure 3-18 Fix the Cabinets

Step 3 After the seams between the two cabinet frames have been adjusted, use a hex wrench to fasten the M6 screws.

Step 4 Repeat the above steps to complete the rotating and stitching of remaining cabinet frames.

You can also rotate and stitch cabinet frames vertically.

Step 1 Align the installation holes in the vertical direction of the two adjacent frames, and adjust the cabinet frames vertically against each other.

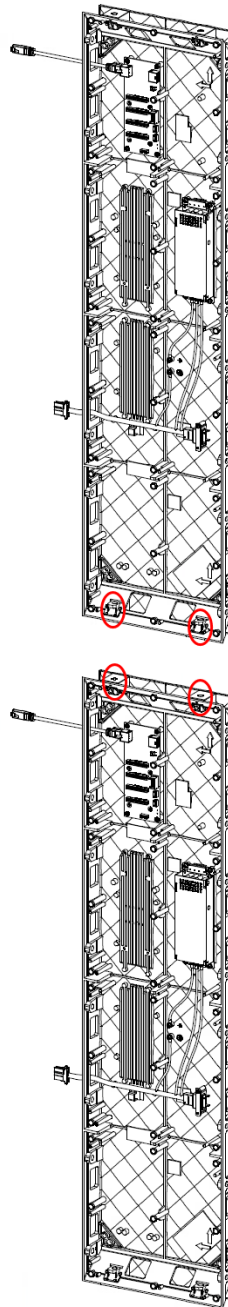


Figure 3-19 Align the Cabinets Vertically

Step 2 Insert the M6 screws from top to bottom into the installation holes.

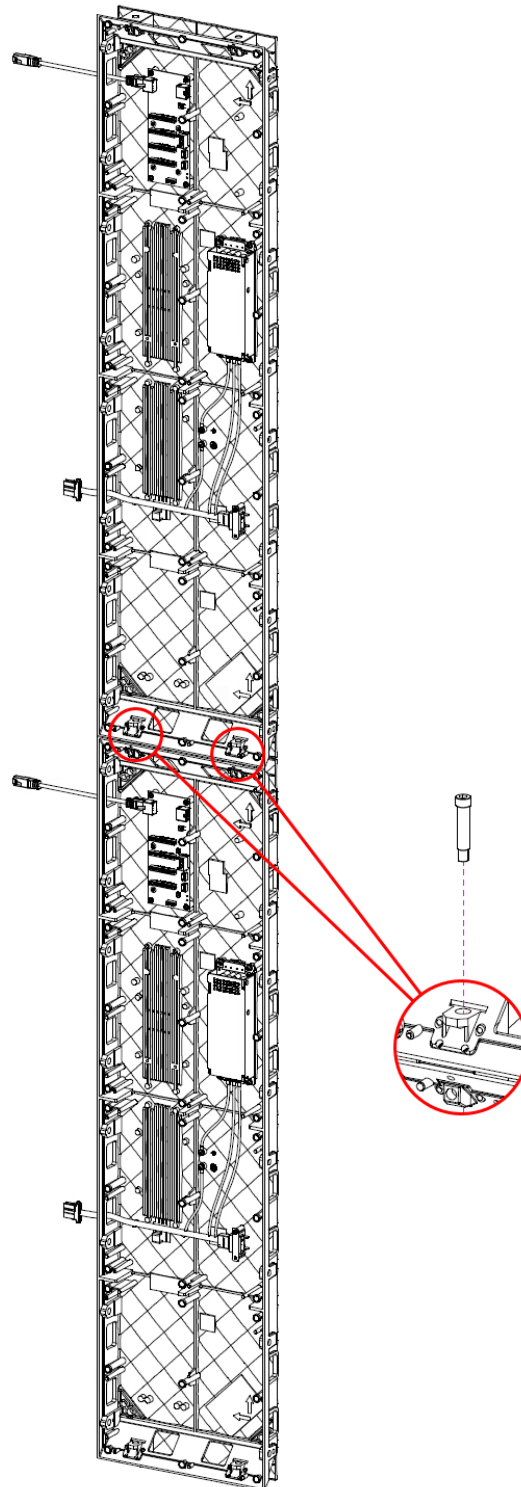


Figure 3-20 Fix the Cabinets

Step 3 After the seams between the two cabinet frames have been adjusted, use a hex wrench to fasten the M6 screws.

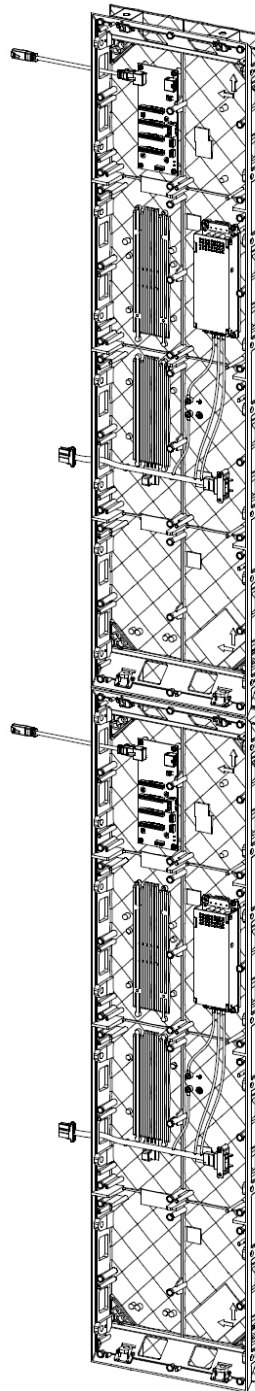


Figure 3-21 Finish the Rotating Stitching of Cabinets

Step 4 Repeat the above steps to complete the rotating and stitching of remaining cabinet frames.

Mixed Stitching of Different Cabinet Frames

Cabinets of varying specifications can be mixed and stitched together. Please calculate and select the specific stitching method based on the width and height of each cabinet. In cases where the

width of the lower cabinets does not align with that of the adjacent upper cabinets, resulting in misalignment during stitching. You can remove the locating studs with the unaligned edge of the lower cabinets before stitching. Taking a screen size of 2500 mm × 1250 mm as an example, refer to the following figure for details on how to stitch these cabinets.

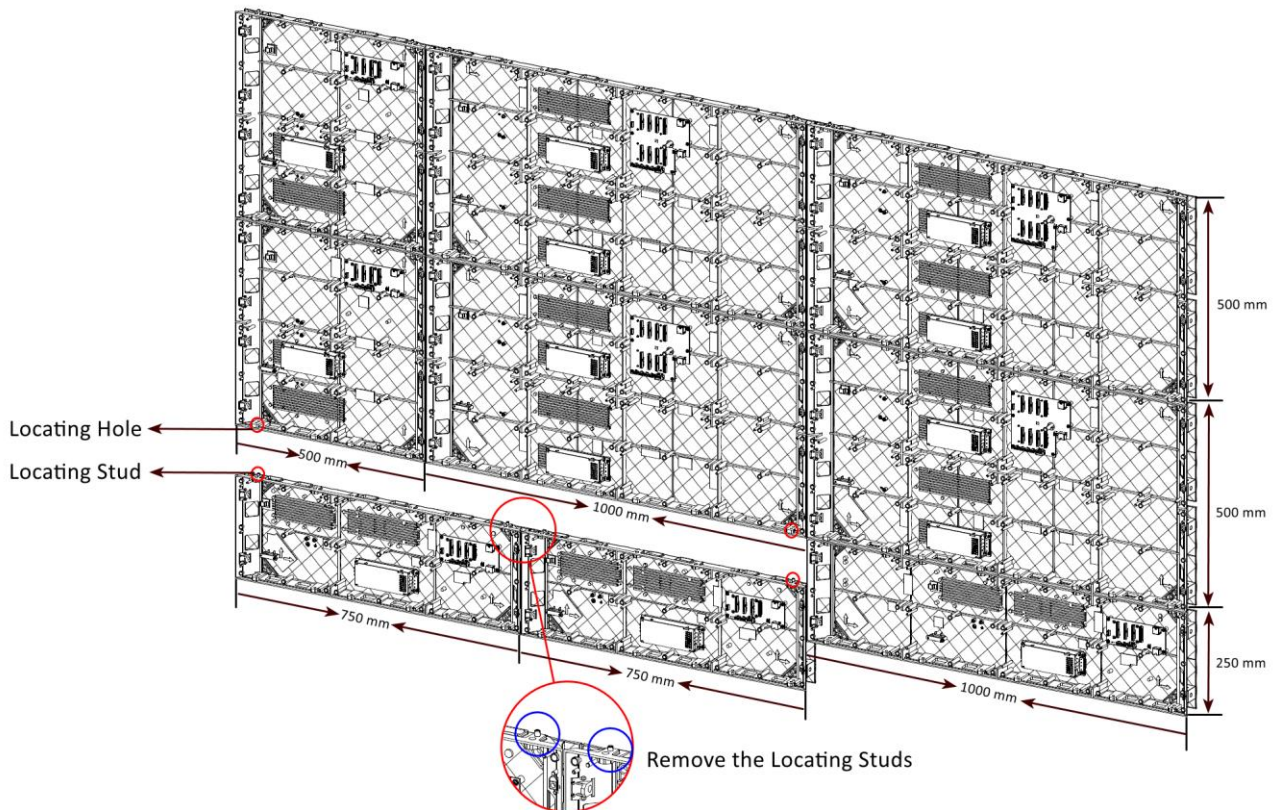


Figure 3-22 Remove Locating Studs

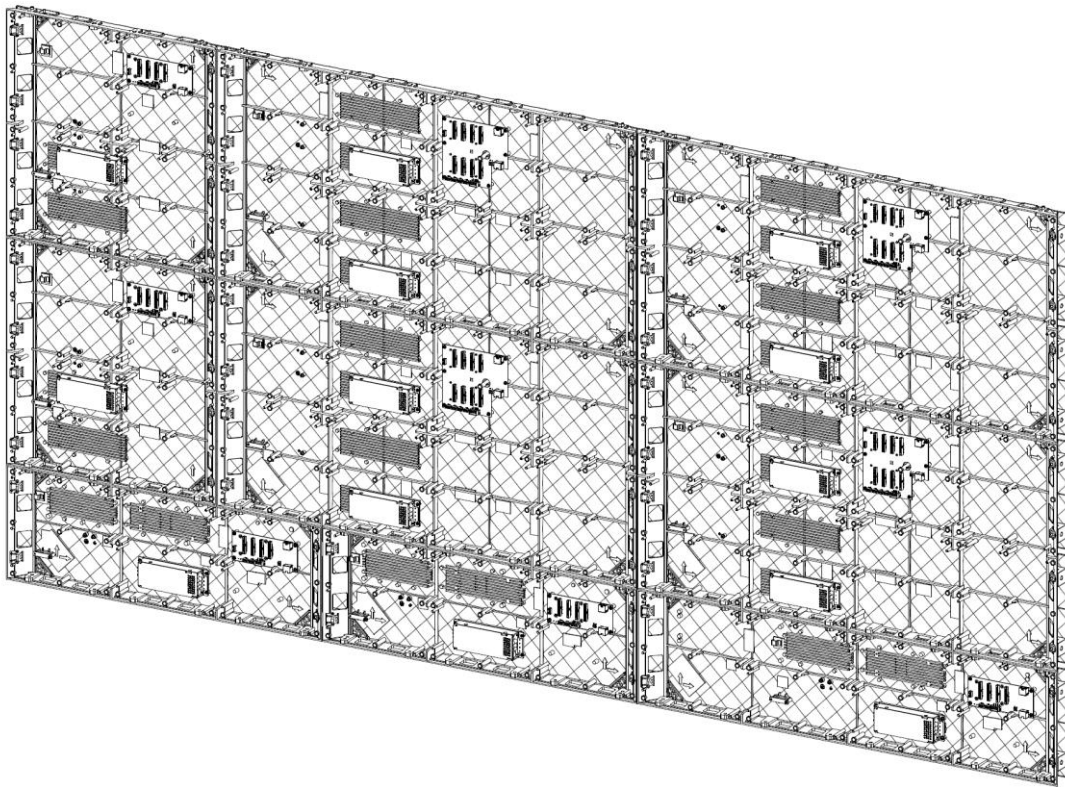


Figure 3-23 Finish the Mixed Stitching of Cabinets

3.3 Connect the Power Cords and Network Cables

3.3.1 Connect the Power Cords

Internal Power Cord Connection

Each cabinet is equipped with a power input connector and a power output interface internally. The internal power cords can be connected in cascade in each row, and the external power cords are needed according to the load capacity of the external power cords.

Pass the power output interface inside the cabinet through the wiring hole at the bottom of the adjacent cabinet, and insert the interface into the power input connector of the adjacent cabinet.

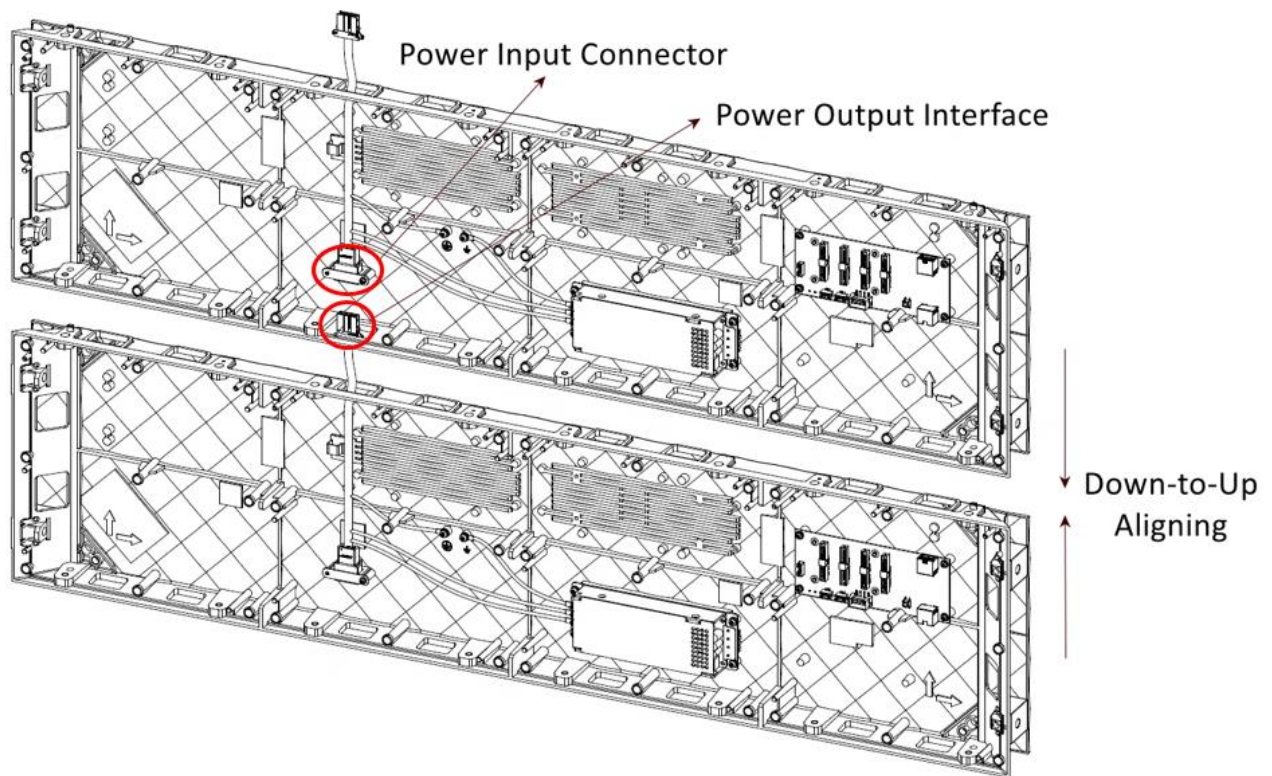


Figure 3-24 Connect the Power Cord Internally

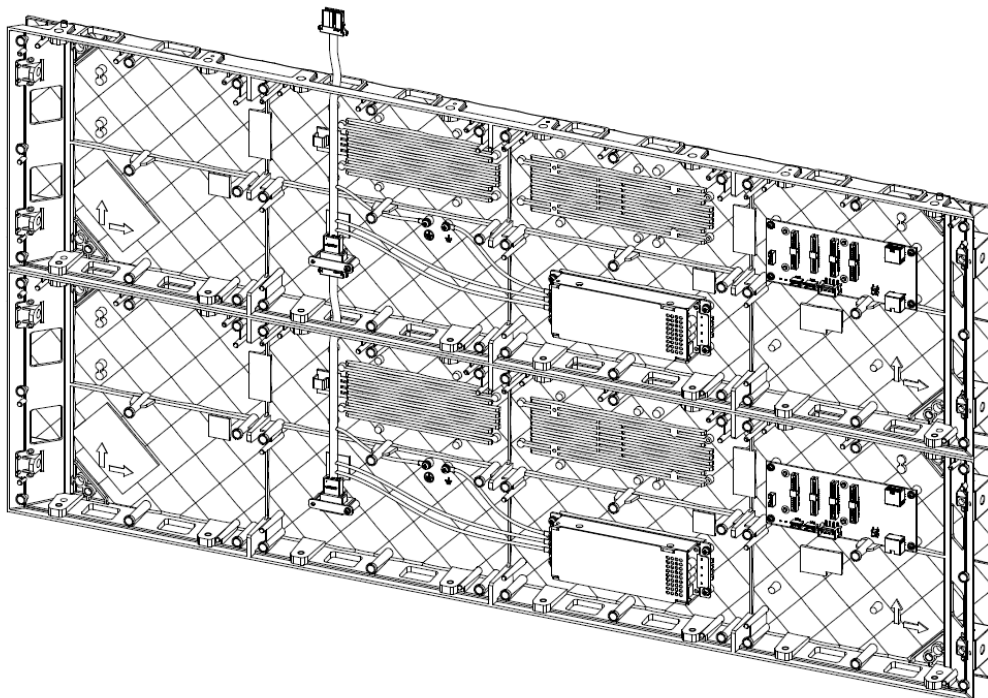


Figure 3-25 Internal Power Cords Connected

External Power Cord Connection

If the actual number of cabinets exceeds the max. load of the power cord, you need to connect the overloaded cabinets to the external power supply.

Step 1 Pass the power output interface through the wiring hole at the bottom of the cabinet to connect the internal power supply.

Step 2 Remove the cover plates on the wiring holes on the left or right of the first overloaded cabinet and pull the power cords through the holes to connect to the external power supply.

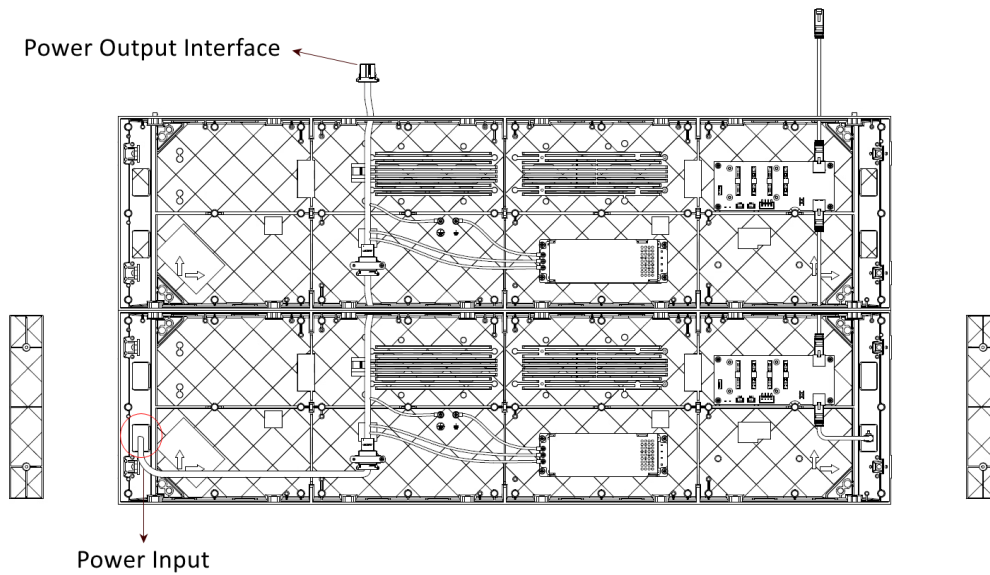


Figure 3-26 Connect the Power Cord Externally (Front View)

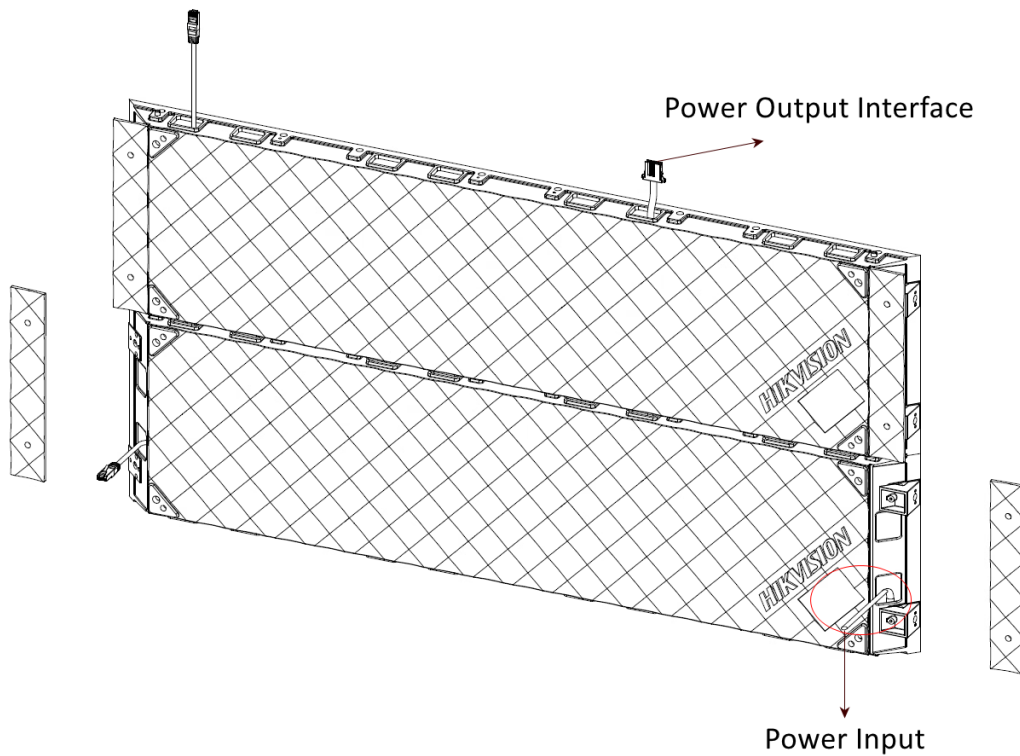


Figure 3-27 Connect the Power Cord Externally (Rear View)

Load Capability of Power Cords

The load capability of a single power cord is limited. You can use the [HiTools Designer](#) to calculate the maximum load capability of a single power cord. Then connect the power cord between the cabinets according to the load capability generated by the calculation.

Take 3×3 P2.6 cabinets (7 cabinets within the max. load of the power cord, the remaining 2 cabinets beyond the max. load of the power cord) for example. The P2.6 cabinet dimension is 1000 mm $\times$ 250 mm $\times$ 50 mm.

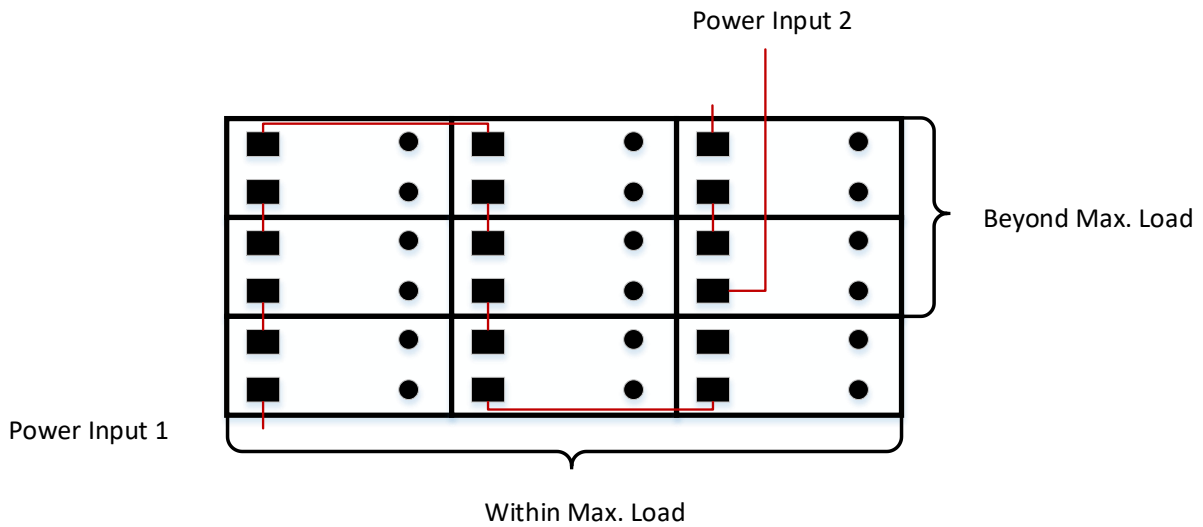


Figure 3-28 Power Cords Connection Diagram

3.3.2 Connect the Network Cables

Each cabinet is equipped with a network input interface and a network output interface internally. The internal network cables can be connected in cascade in each row, and the external network cables for sending card connections are needed according to the load capacity of the network interfaces of the sending card.

Internal Network Cable Connection

- Step 1 Pass one end of the network cable through the wiring hole of cabinet, and insert it into one network interface.
- Step 2 Insert the other end of the network cable into the network interface of the adjacent cabinet.
- Step 3 Repeat the above steps to complete the longitudinal cascade connection of the network cables in the remaining cabinets.

External Network Cable Connection

- Step 1 Refer to the steps of connecting a network cable internally to complete the network cable connection within the max. load.
- Step 2 Connect a network cable from the wiring hole externally to the network interface of the first row of the cabinet that beyond the max. load.

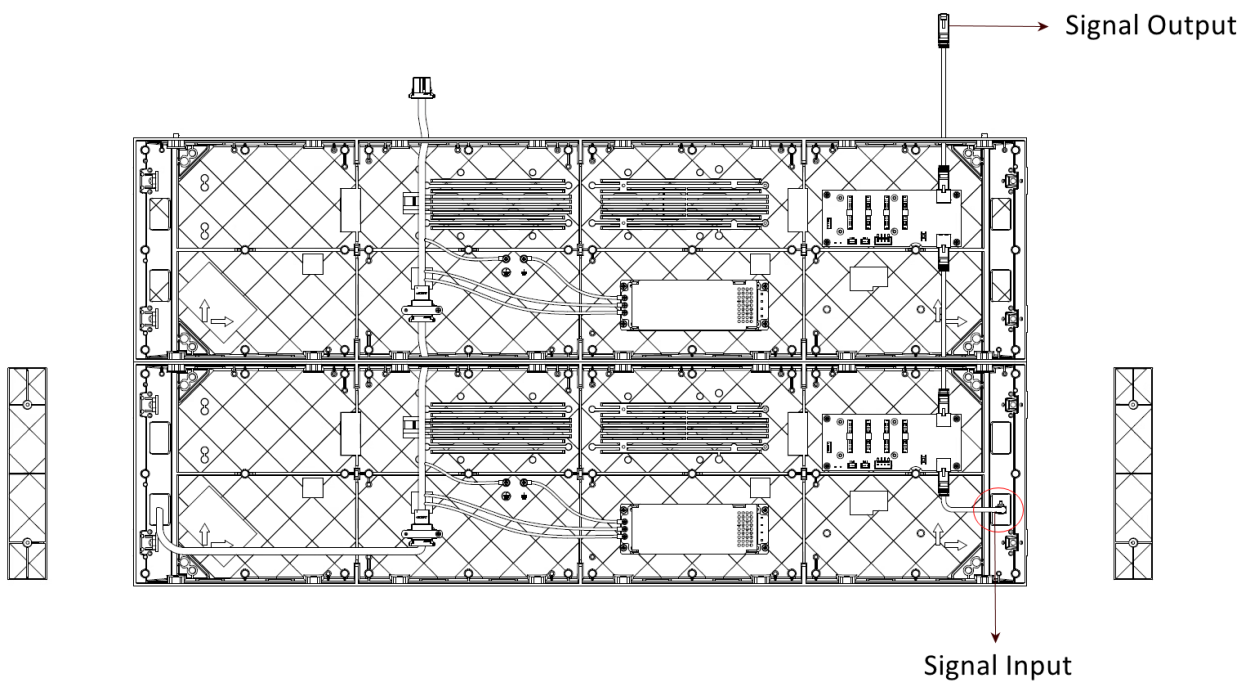


Figure 3-29 Connect the Network Cable Externally (Front View)

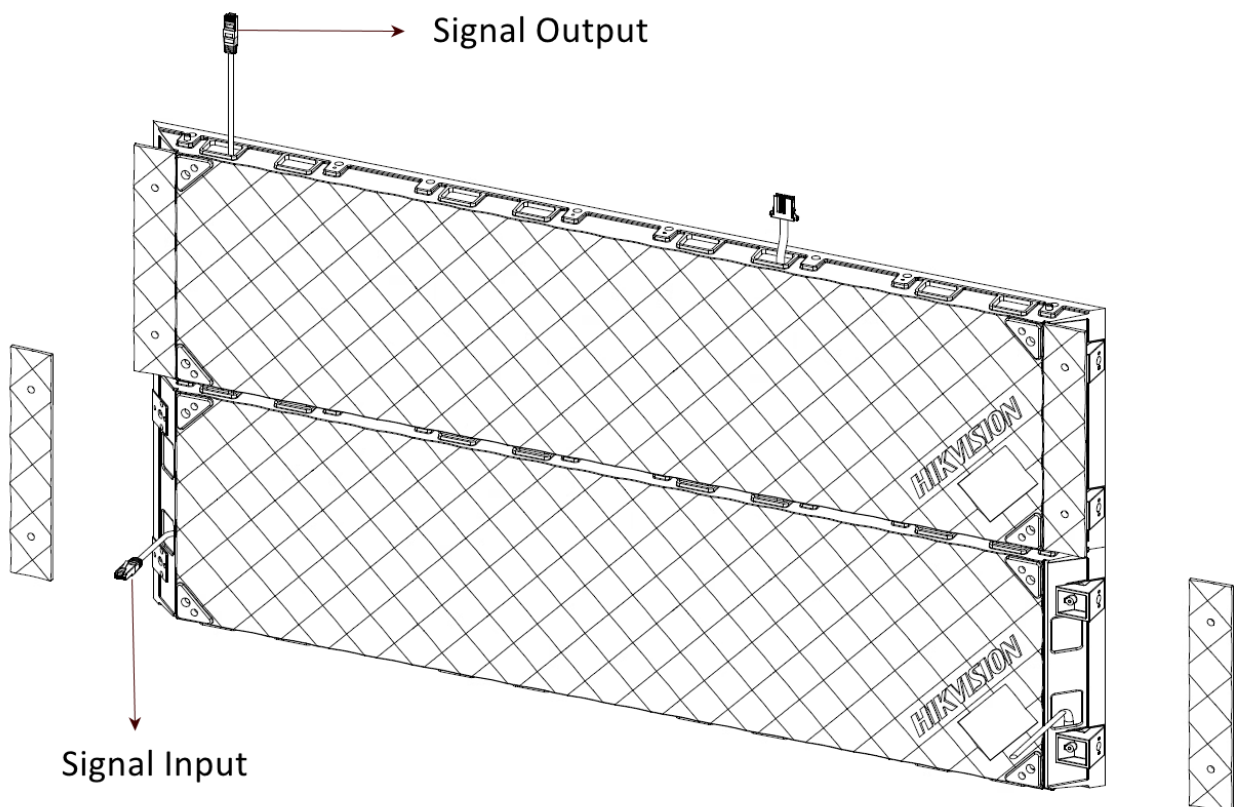


Figure 3-30 Connect the Network Cable Externally (Rear View)

Note

The figures shown above are for reference only. The actual connection can be flexibly adjusted according to your needs, so long as each single network interface is not overloaded.

Load Capability of Newtork Interfaces

The load capability of a single network interface of the sending card is limited. You can use the [HiTools Designer](#) to calculate the maximum load capability of a single network interface of a sending card. Then connect the network cables between the cabinets according to the load capability generated by the calculation.

Take 5×4 P2.6 cabinets (17 cabinets within the max. load of the power cord, the remaining 3 cabinets beyond the max. load of the power cord) for example. The overloaded cabinets are connected to the second network interface of sending card. The P2.6 cabinet dimension is 1000 mm $\times$ 250 mm $\times$ 50 mm.

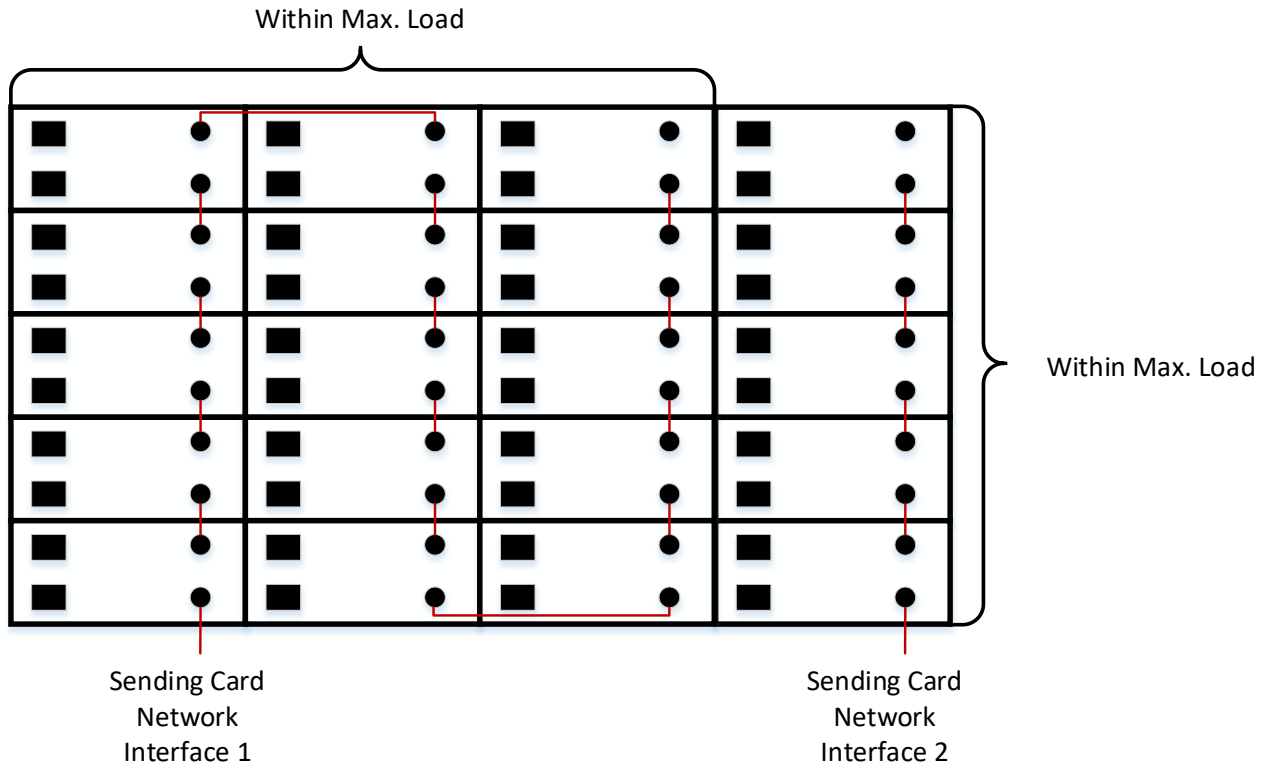


Figure 3-31 Network Cables Connection Diagram

3.4 Install the Lamp Board

The number of lamp boards on each cabinet depends on the cabinet dimension. The actual device prevails.

The lamp board is fixed on the cabinet frame by magnetic attraction. Take a cabinet with the dimension of 1000 mm × 250 mm × 50 mm as an example to introduce the installation of the lamp board.

Step 1 According to the arrow direction on the back of the lamp board, put the lamp board to the corresponding position of the cabinet frame, and initially align the lamp board with the edge of the cabinet frame.

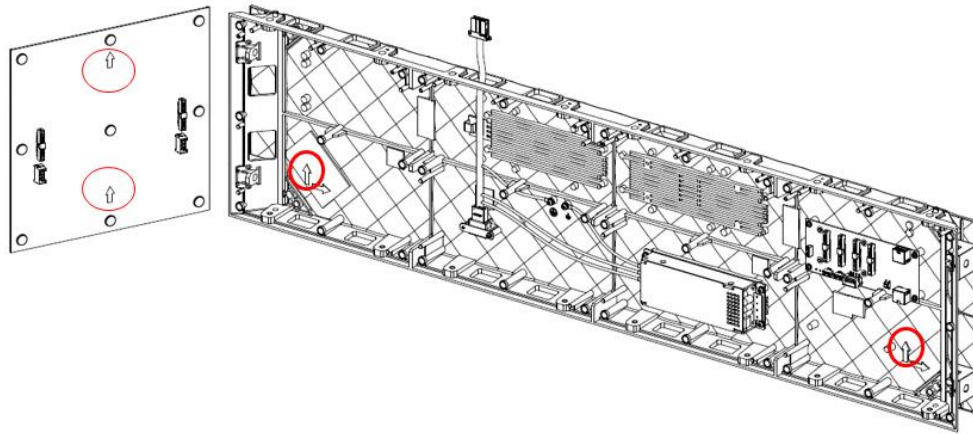


Figure 3-32 Lamp Board Installation Direction

Step 2 One end of the signal cables is already connected to the slot on the back board when it is shipped, insert the other end of the signal cables into the slot on the back of the lamp board.

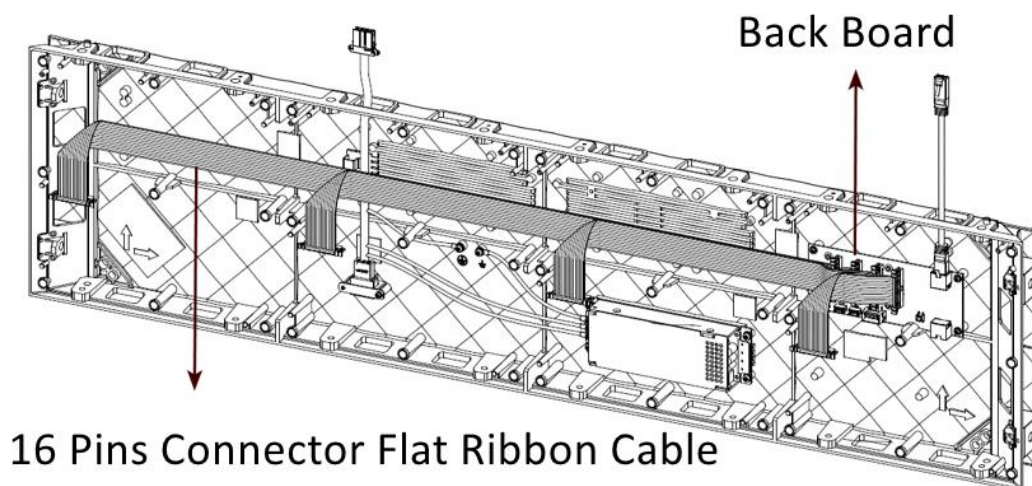


Figure 3-33 Default Status of Cabinet

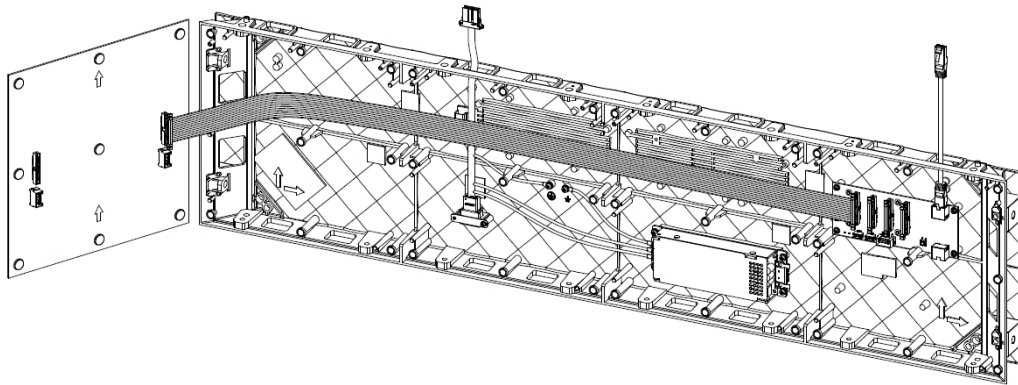


Figure 3-34 Connect the Lamp Board

Step 3 Align and adsorb one side of the lamp board with one side of the cabinet frame, align and adsorb the magnet sheet on the back of the lamp board with the magnet screw on the cabinet frame, and slowly attach the remaining three sides of the lamp board.

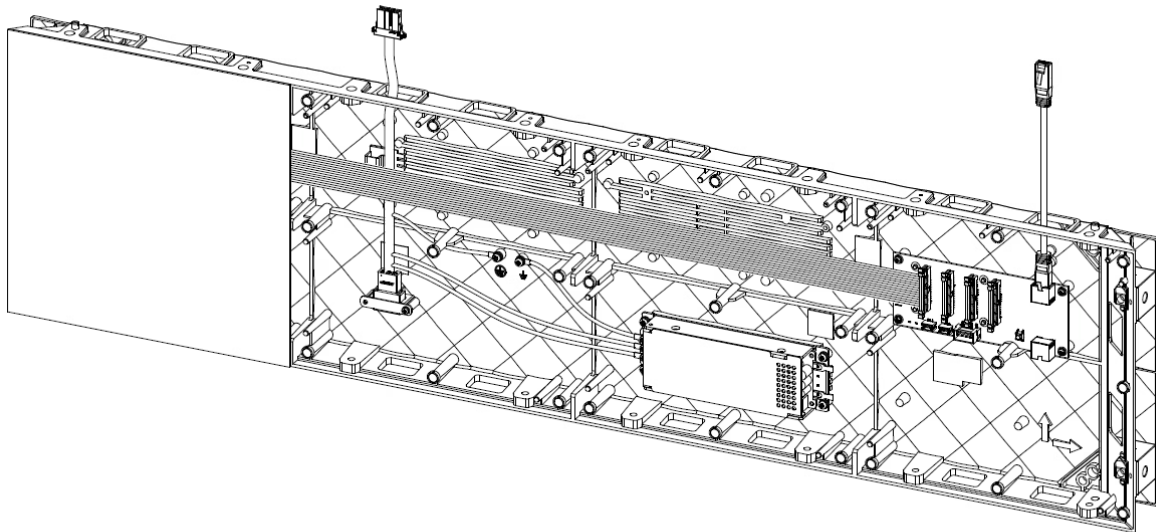


Figure 3-35 Install the First Lamp Board

Step 4 Repeat the above steps to install the remaining lamp boards.

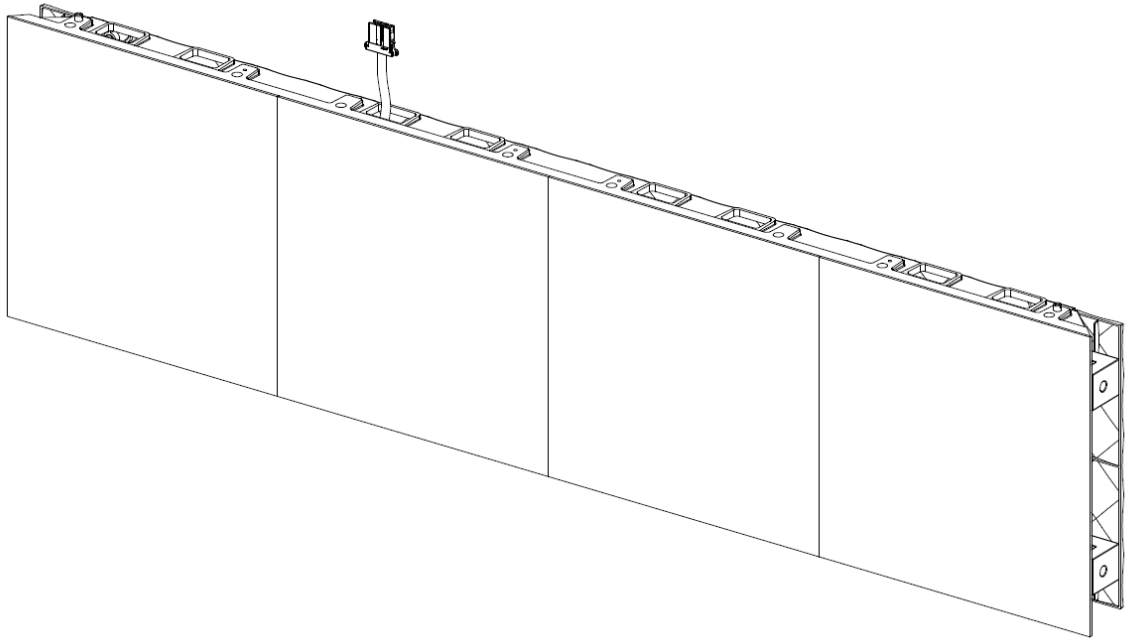


Figure 3-36 Install the Remaining Lamp Boards

When rotating and stitching the lamp board, ensure that the installation direction of lamp board is aligned with the placement direction of cabinet.

Step 1 According to the arrow direction on the back of the lamp board, put the lamp board to the corresponding position of the cabinet frame, and initially align the lamp board with the edge of the cabinet frame.

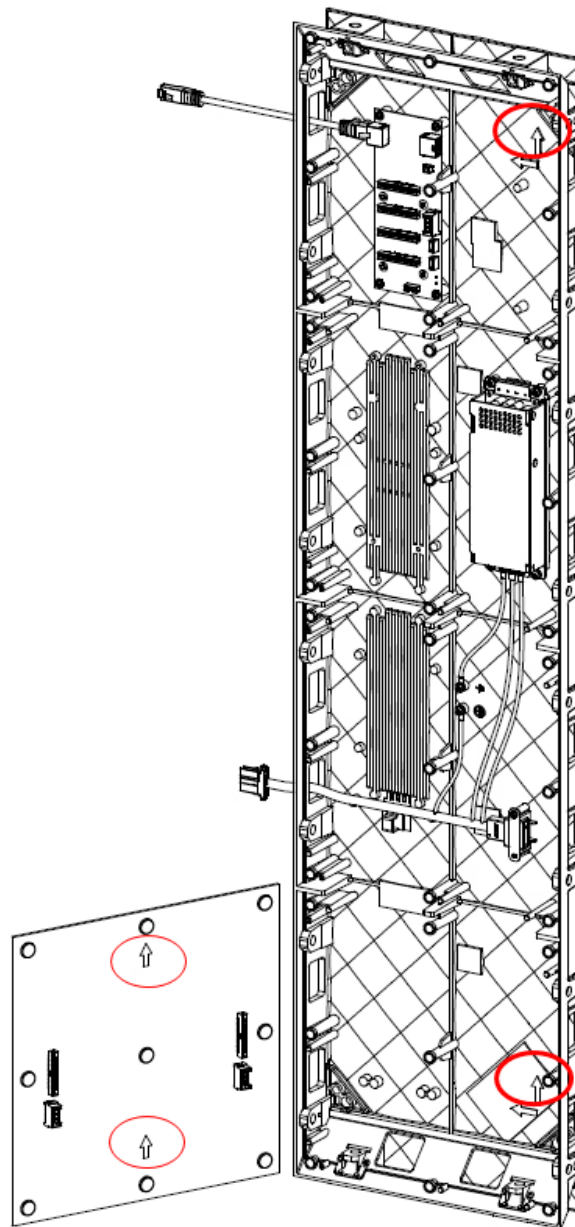


Figure 3-37 Installation Direction of Lamp Board

Step 2 One end of the signal cables is already connected to the slot on the back board when it is shipped, insert the other end of the signal cables into the slot on the back of the lamp board.

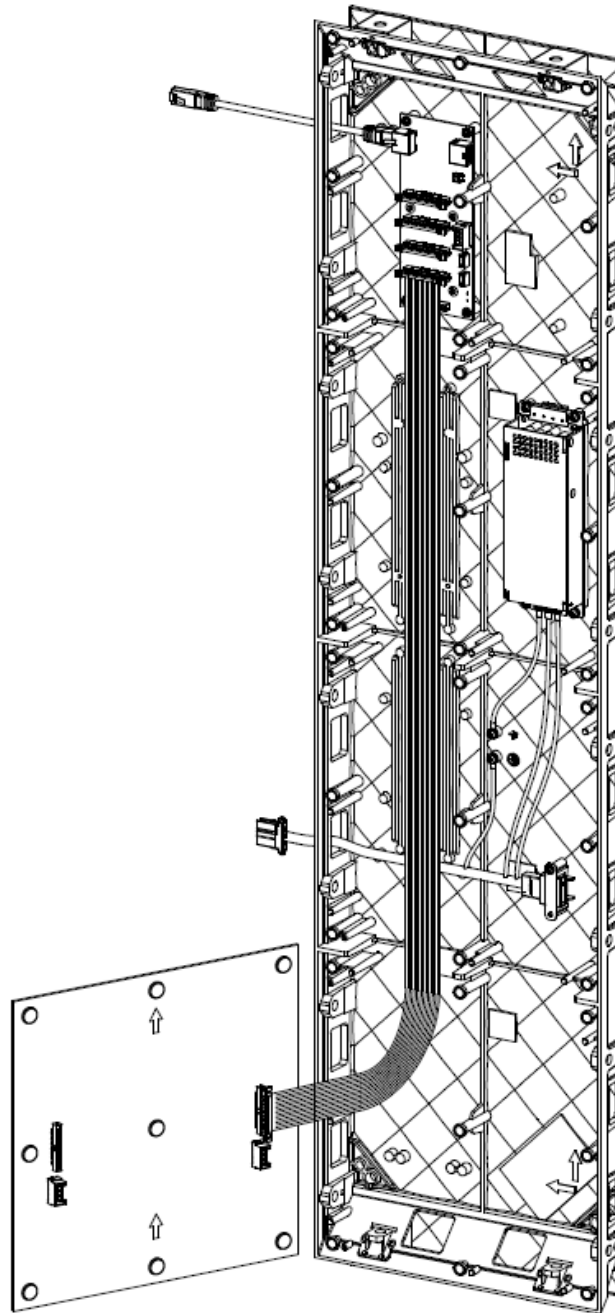


Figure 3-38 Connect the Lamp Board

Step 3 Align and adsorb one side of the lamp board with one side of the cabinet frame, align and adsorb the magnet sheet on the back of the lamp board with the magnet screw on the cabinet frame, and slowly attach the remaining three sides of the lamp board.

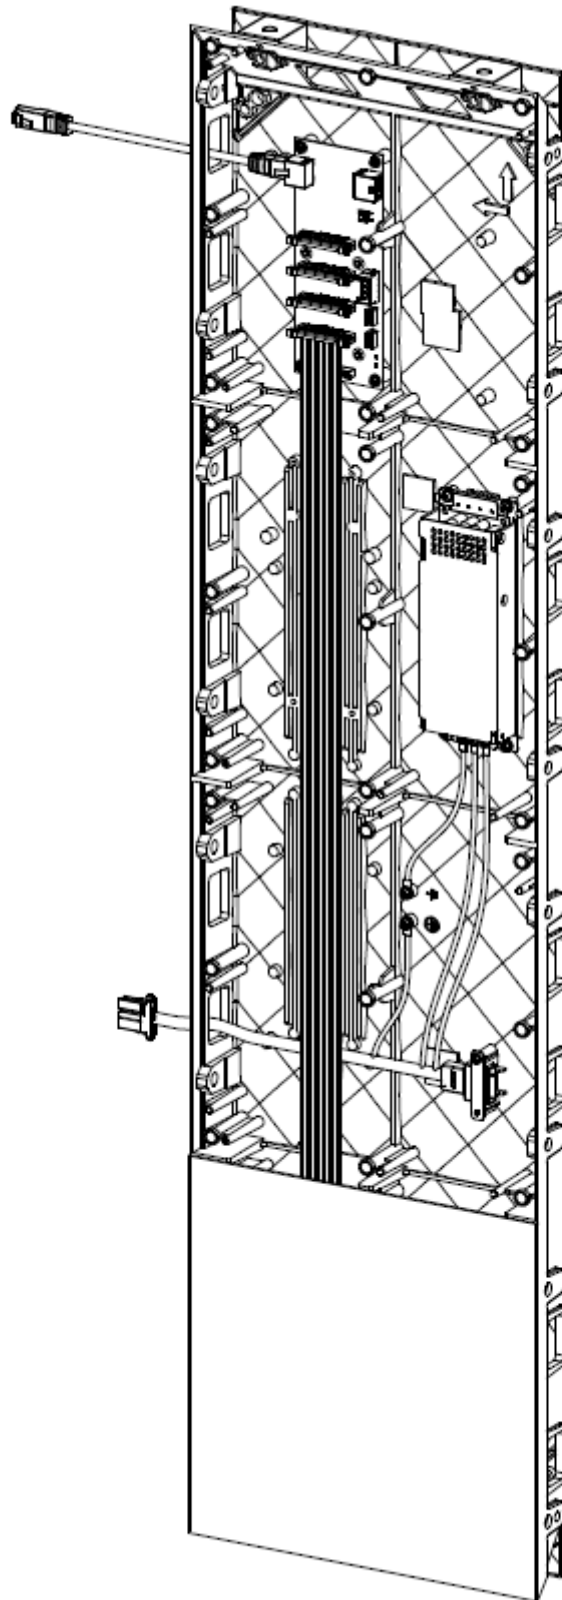


Figure 3-39 Install the First Lamp Board

Step 4 Repeat the above steps to install the remaining lamp boards.

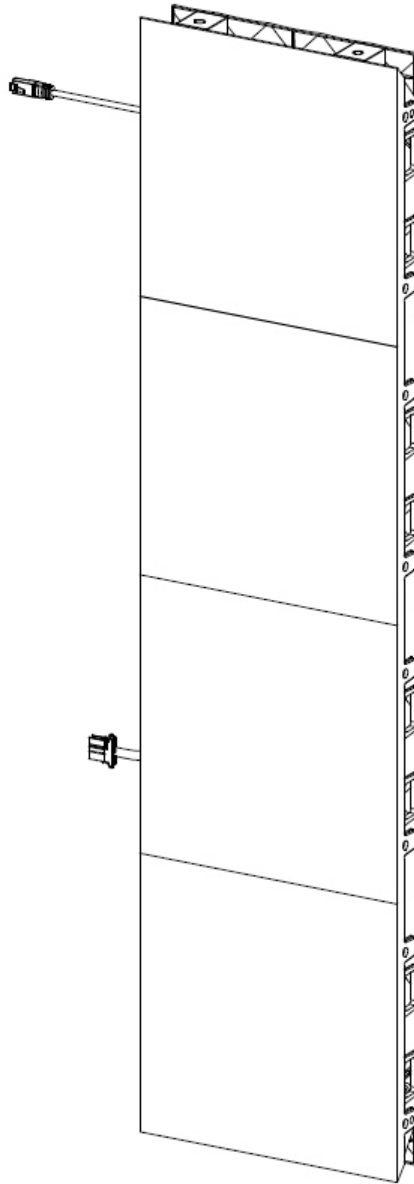


Figure 3-40 Install the Remaining Lamp Boards

Use flexible ribbon cables to connect lamp boards to the receiving card slots marked with the same sequence numbers from right to left or from top to bottom. The connection relationship between lamp boards and the receiving card slots is shown in the following figure.

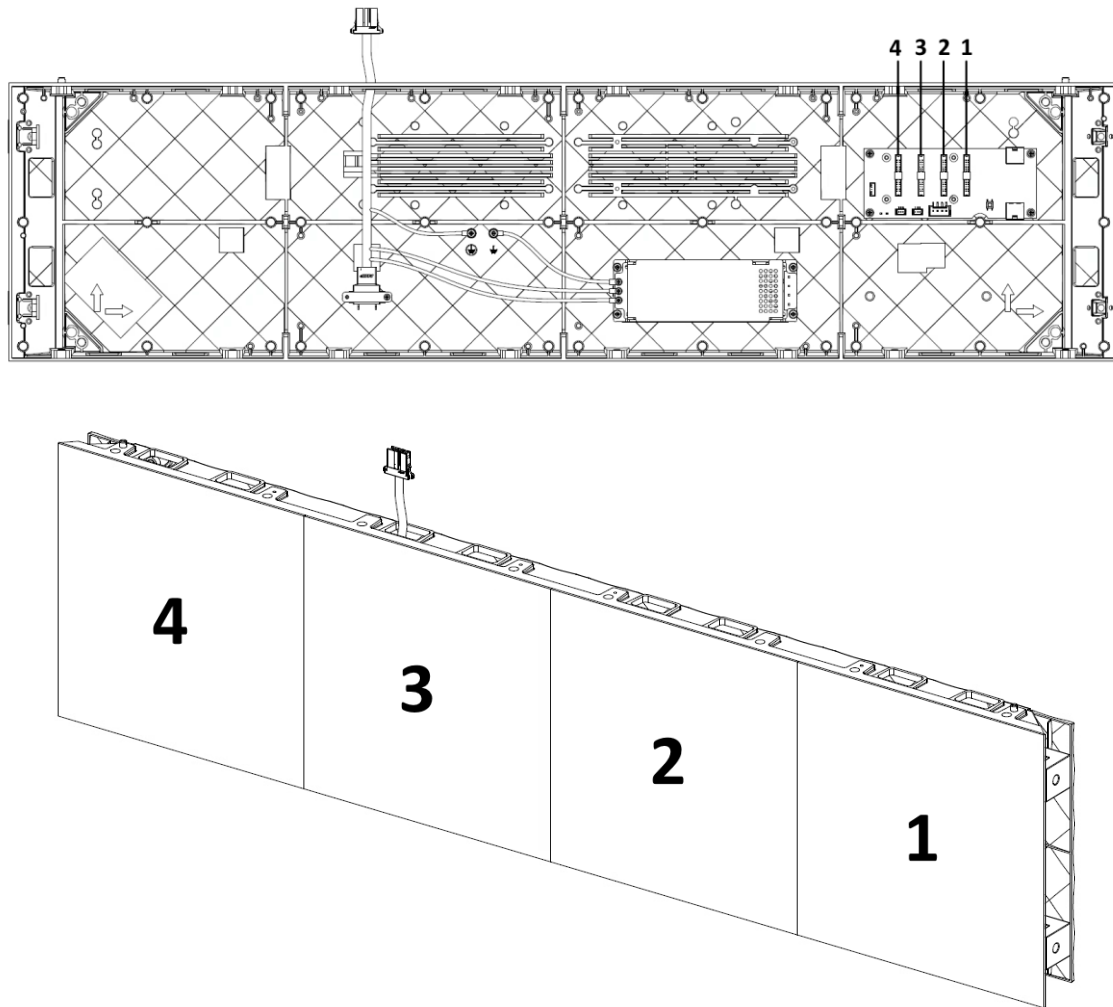


Figure 3-41 Cabinet 1 (1000 mm × 250 mm × 50 mm)

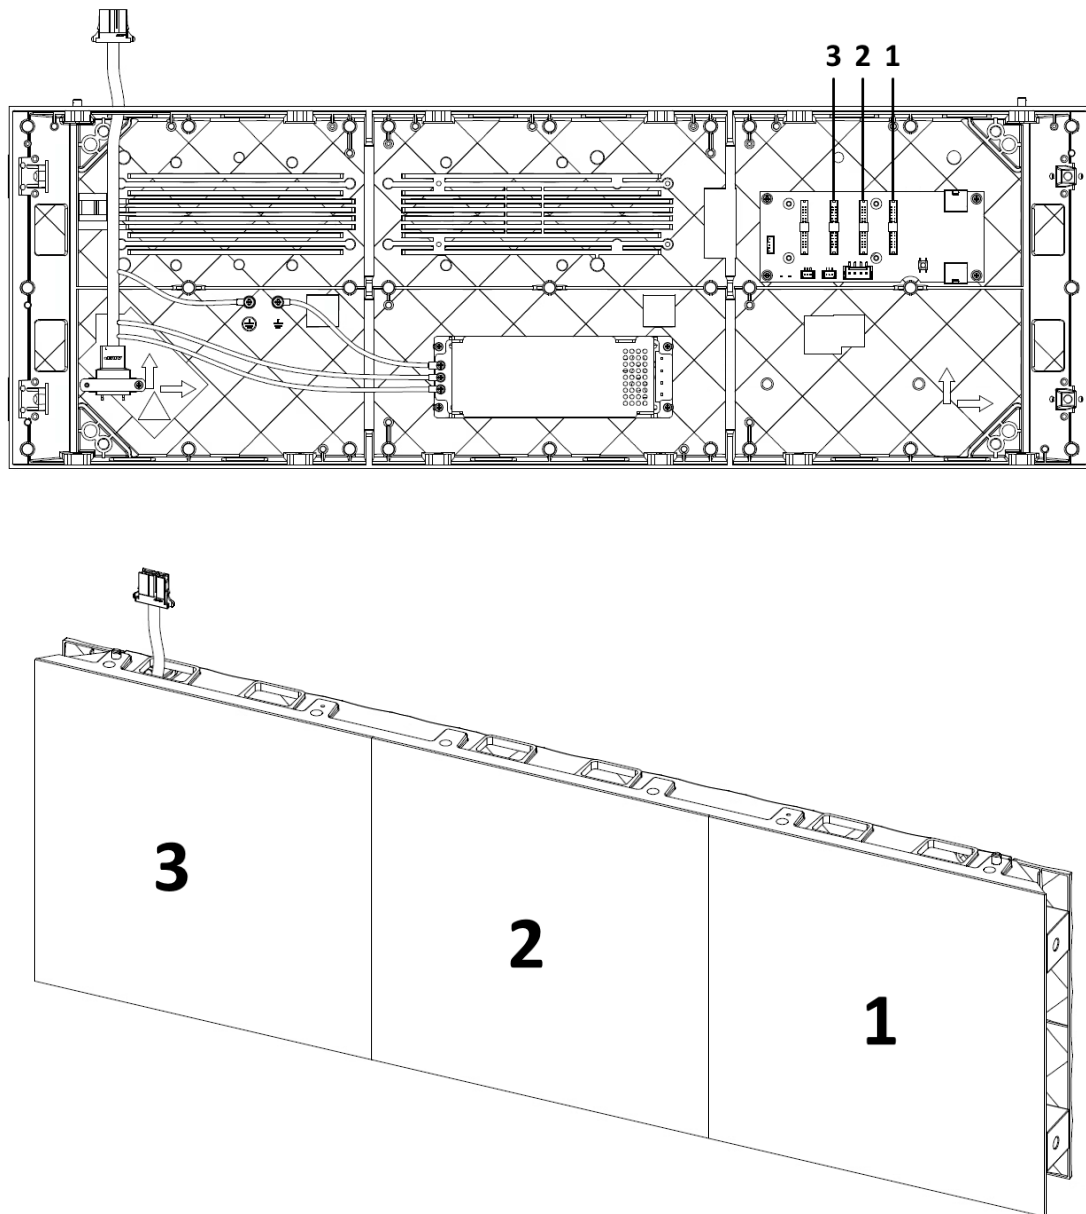


Figure 3-42 Cabinet 2 (750 mm × 250 mm × 50 mm)

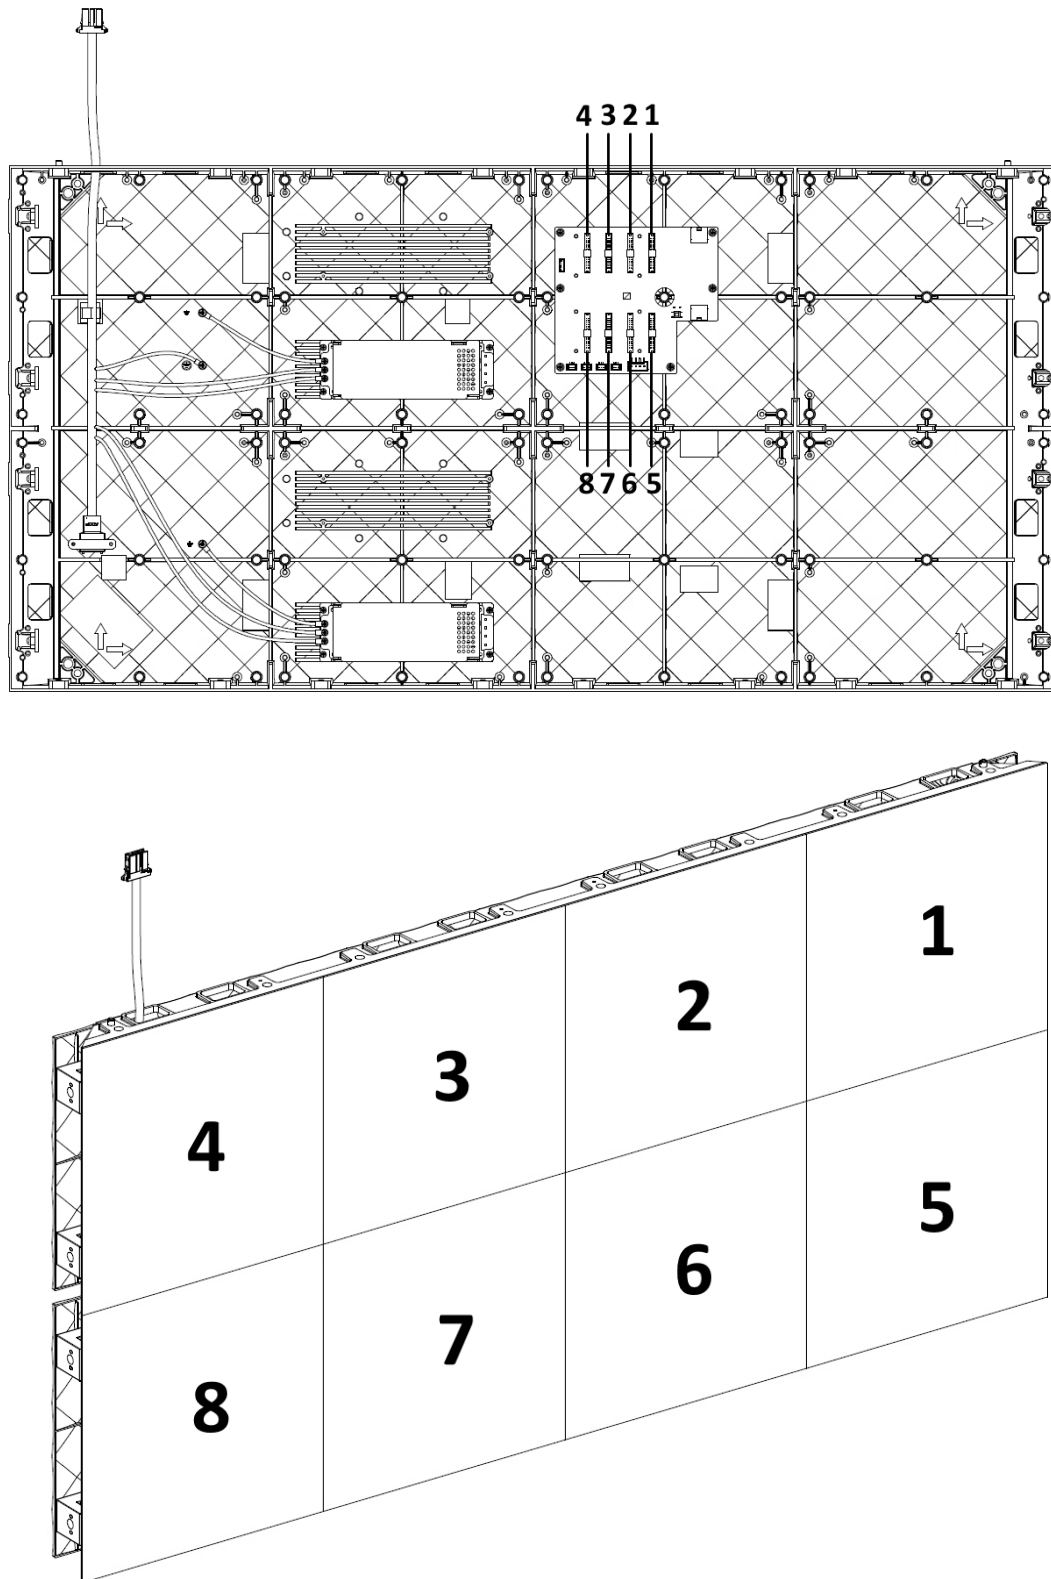


Figure 3-43 Cabinet 3 (1000 mm × 500 mm × 50 mm)

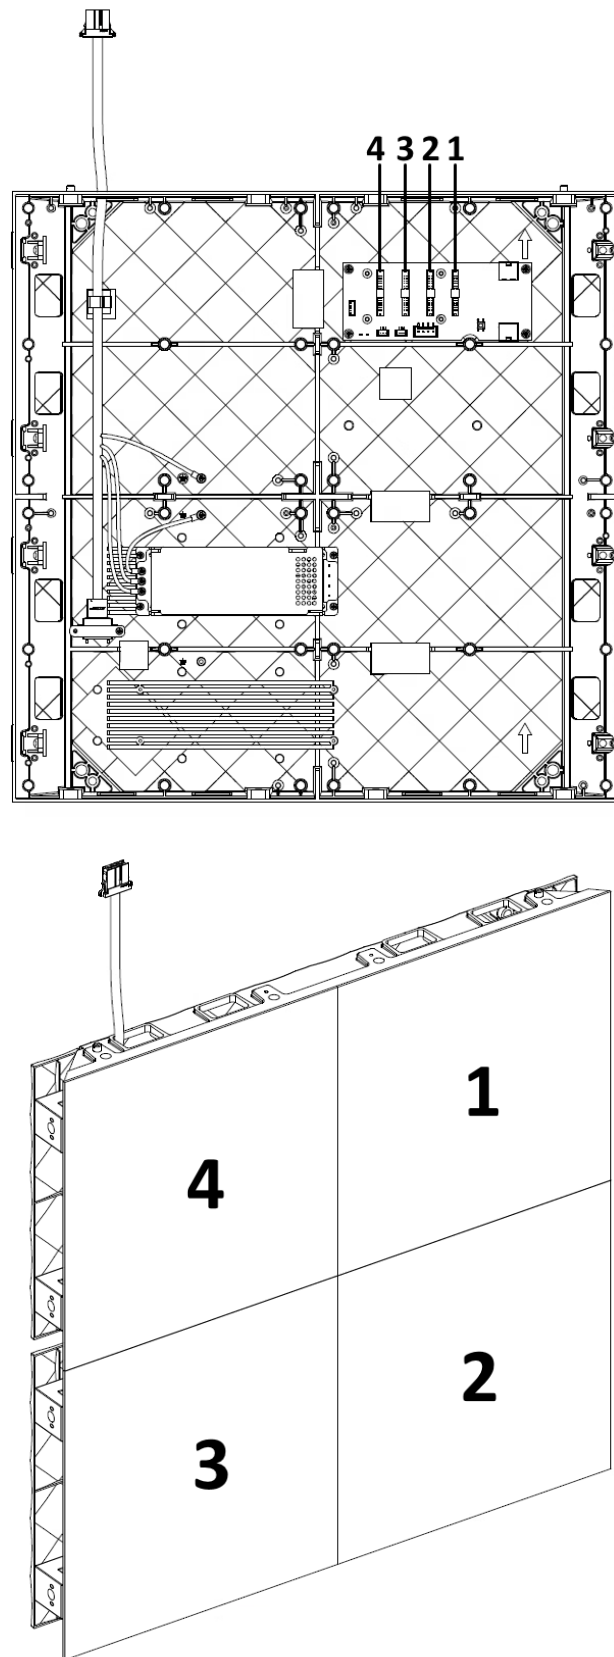


Figure 3-44 Cabinet 4 (500 mm × 500 mm × 50 mm)

3.5 Maintain the Cabinet

3.5.1 Maintain the Lamp Board

You can maintain the lamp board from the front side.

Front Maintenance

Before You Start

Switch off the external power supply before you maintain the lamp board.

Step 1 Use a LED vacuum pump to remove the first lamp board.

Step 2 Remove the signal cables attached to the slots on the back of the lamp board for maintenance.

Step 3 After the maintenance, assemble the lamp board back according to the direction of the arrow on the back of the lamp board. Align and absorb one side of the lamp board with one side of the cabinet frame, and insert the cable plugs into the slot on the back of the lamp board.

Step 4 Align and absorb the magnet sheets on the back of the lamp board with the magnet screws on the cabinet frame, and slowly attach the remaining three sides of the lamp board.

3.5.2 Maintain the Power Supply

You can maintain the power supply from the front side.

Front Maintenance

Before You Start

Switch off the external power supply before you maintain the power supply.

Step 1 Disassemble the lamp boards. More details see 3.5.1 Maintain the Lamp Board.

Step 2 Disconnect the power output interface from the upper power connector.

Step 3 Unscrew the screws around the power supply and on the three power cords to remove the power supply for maintenance.

Step 4 After the maintenance, assemble the power supply back to the cabinet and connect the power cords in order according to the original sequence. Tighten the screws.

Step 5 Connect the power output interface to the upper-level power connector.

Step 6 Connect the signal cables to the slot on the back of the lamp board and assemble the board back.

Step 7 Turn on the power supply and observe whether the power indicator is normal.

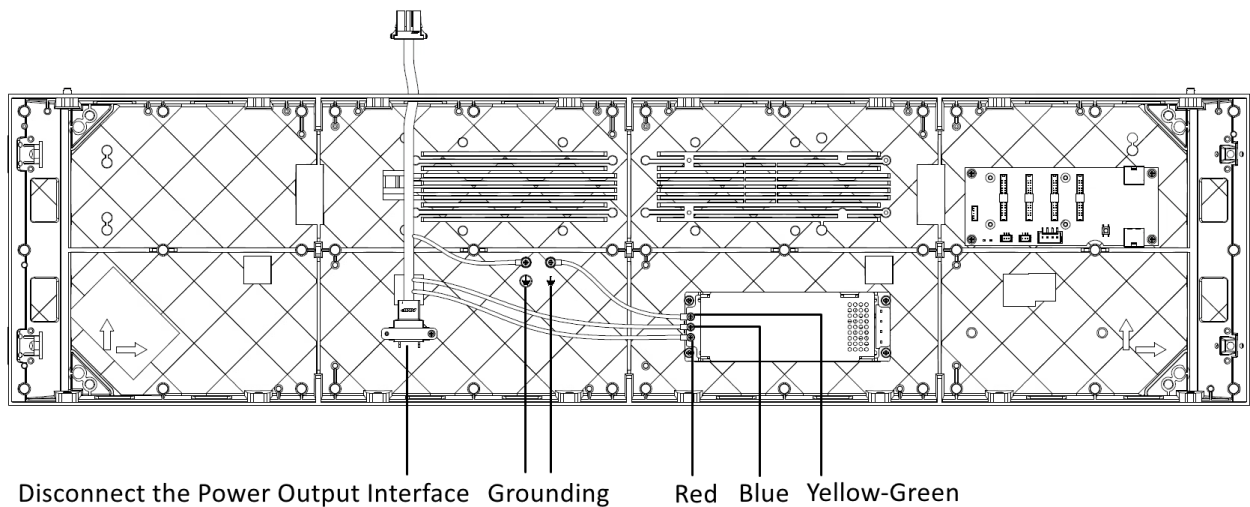


Figure 3-45 Maintain the Power Supply

3.5.3 Maintain the Receiving Card

Before You Start

Switch off the external power supply before you maintain the receiving card.

Step 1 Disassemble the lamp boards. More details see 3.5.1 Maintain the Lamp Board.

Step 2 Unscrew the screws around the back board and remove the back board. Disassemble the receiving card on the back board for maintenance.

Step 3 After the maintenance, use signal cables to connect the receiving card with the back board. Pay attention to the direction of the receiving card.

Step 4 (Optional) If the thermal pad is removed together with the receiving card, stick the thermal pad back after completing the receiving card maintenance.

Step 5 Tighten the screws to fasten the back board to the cabinet.

Step 6 Connect the power output interface to the upper-level power connector.

Step 7 Connect the signal cables to the slot on the back of the lamp board and assemble the board back.

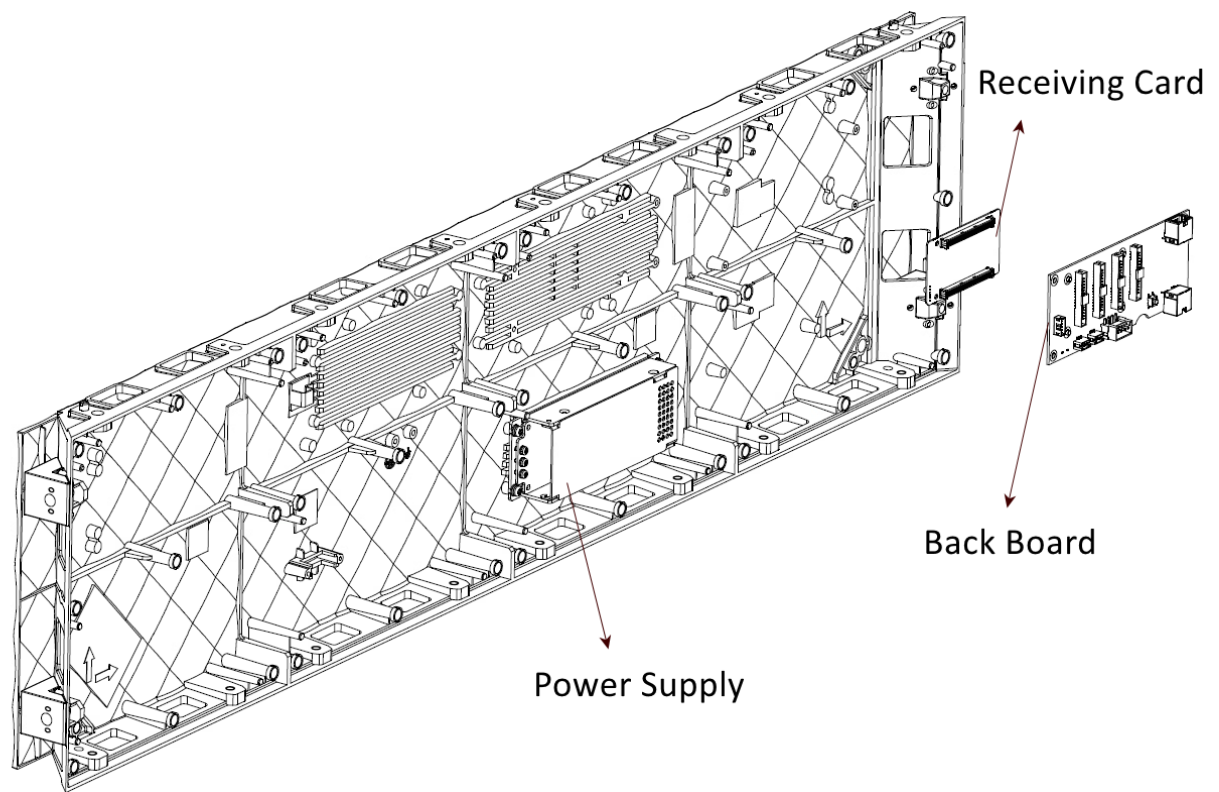


Figure 3-46 Maintain the Receiving Card

Chapter 4 Software Debugging

Use the LED Tool client to configure the device. For more details about the operating instructions, please download the [LED Tool client](#), and then scan the QR code below to view the User Manual of the software.



Figure 4-1 QR Code of the LED Tool Client User Manual

Chapter 5 Package Information

5.1 Packing List

The accessories in the package are listed in the following table.

Table 5-1 Packing List

Accessory	Amount
Cabinet	1
Lamp Bead	10
Driver IC	Several
Regulatory Compliance and Safety Information	1
Iron Joint Sheet	4
M6 Screw	Several

5.2 Package

5.2.1 Package Dimension

Package dimensions are listed in the following table.

Table 5-2 Package Dimension

Cabinet Dimension	Package Dimension	Package Form
1000 mm (W) × 250 mm (H) × 50 mm (D)	1180 mm × 136 mm × 330 mm	1 Cabinet in 1 Carton Box
	1237 mm × 1041 mm × 652 mm	10 Cabinet in 1 Carton Box
750 mm (W) × 250 mm (H) × 50 mm (D)	876 mm × 136 mm × 330 mm	1 Cabinet in 1 Carton Box
	915 mm × 1041 mm × 705 mm	10 Cabinet in 1 Carton Box
500 mm (W) × 500 mm (H) × 50 mm (D)	876 mm × 136 mm × 330 mm	1 Cabinet in 1 Carton Box
	1237 mm × 1041 mm × 652 mm	10 Cabinet in 1 Carton Box
1000 mm (W) × 500 mm (H) × 50 mm (D)	1180 mm × 136 mm × 605 mm	1 Cabinet in 1 Carton Box
	1237 mm × 1041 mm × 652 mm	5 Cabinet in 1 Carton Box



Figure 5-1 Lie a Wooden Pallet



Figure 5-2 Put a Carton Box on the Pallet



Figure 5-3 Put Two Cabinets in the Carton Box



Figure 5-4 Put Ten Cabinets in the Carton Box

Chapter 6 Warranty Policy

6.1 Warranty Scope

This warranty policy applies to LED display products (hereinafter referred to as “Products”) purchased directly from Hangzhou Hikvision Digital Technology Co., Ltd. (hereinafter referred to as “Hikvision”) or Hikvision’s overseas channel partners and OEM and within the warranty period. Any product not purchased directly from Hikvision does not apply to this warranty policy.

6.2 Warranty Period

The warranty period shall be in accordance with the specific sales contract. Please make sure the warranty card or other valid warranty documents are in safekeeping. The warranty period starts from the shipment date of the product and is determined by its serial number.

6.3 Warranty Service

Products shall be installed and used strictly in comply with the installation instructions and cautions are stated in the product manual. If products have defects in quality, materials, and manufacture during normal use, Hikvision will provide warranty service for products under this warranty policy.

6.4 Warranty Service Types

6.4.1 Free and Remote Technical Support Service

Remote technical support service is provided through instant message tools such as telephone, mail, and other means to solve simple and common technical problems. This service is applicable for technical problems including but not limited to the connection of signal cables and power cable, system problems of software use and parameter settings, and replacement of the module, power supply, PCB board, etc.

6.4.2 Return to RMA Center for Repair Service

- 1) For problems that can not be solved by online remote service, Hikvision’s engineer will confirm with the customers whether to provide service by returning the product to the RMA center.
- 2) If RMA center repair service is needed, the customer shall bear the freight, insurance, tariff, and customs clearance for return delivery of the returned products or parts to Hikvision’s RMA center. Hikvision will send back the repaired products or parts to the customer and only bear one-way freight.
- 3) Hikvision will reject unauthorized return delivery via pay upon arrival and will not be liable for any tariffs and customs clearance fees. Hikvision shall not be held liable for any defects,

damages, or losses of the repaired products or parts due to transportation or improper packaging. (The customer can ask for the right empty package box from Hikvision's RMA center).

6.4.3 Repair Service Scope

- Repair dead lamp
- Replace driver IC chip
- Repair the solder pad

6.4.4 Repair Time

Within 7 working days after receiving the product from the RMA center.

6.4.5 Return Visit

Make phone interviews from time to time to learn the actual screen situation.

6.4.6 Repair Conditions

We recommend:

- 1) When the screen has over 0.3‰ of dead lamps, you can ask for the repair (Take 1080P LED display as an example, repair service is available when the number of dead lamps is over 60.)
Dead lamp rate: Proportion of dead lamps after installation and maintenance.
- 2) PCB failure, power module failure, or physical damage to the lamp board. (The number of failures is more than the spare parts.)

6.5 Disclaimer

No warranty liability shall be bared by Hikvision for defects or damages due to the following conditions:

1. Unless written agreed otherwise, this Warranty Policy does not apply to consumables, including but not limited to connectors, networks, fiber optic cables, cables, power cables, signal cables, aviation connectors, and other wires and connections.
2. Defects, malfunctions, or damages caused by improper use, improper handling, improper operation, improper installation/disassembly of the display, or any other customer misconduct. Defects, malfunctions, or damages caused during transportation.
3. Unauthorized disassembly or repair without permission of Hikvision.
4. Improper use or maintenance without the guidance of the product manual.
5. Manmade damages, physical damages, accident damages, and product misuse, such as component defect damage, PCB board defect, etc.
6. Product damage or malfunction caused by Force Majeure Events, including but not limited to war, terrorist activities, floods, fires, earthquakes, lightning, etc.

7. The product shall be stored in a dry, ventilated environment. Any product defects, malfunctions, or damages caused by storage in an external environment that does not comply with the product manual, including but not limited to extreme weather, humidity, salt haze, pressure, lightning, sealed environment, compressed space storage, etc.
8. Products used in conditions not meeting product parameters include, but not limited to lower or higher voltage, extreme or excessive power surges, and improper power conditions.
9. Defects, malfunctions, or damages caused by non-compliance with technical guidelines, instructions, or precautions during the installation.
10. Natural loss of brightness and color under normal conditions. Normal degradation in the performance of the Product, normal wear and tear.
11. Lack of necessary maintenance.
12. Other repairs not caused by product quality, design, and manufacturing.
13. Valid warranty documents cannot be provided. The product serial number is torn or damaged. The product shell or other external parts are damaged.
14. Repairs after warranty period.
15. Products that have too significant damages caused by mishandling, accidents, improper maintenance, and failure to comply with the product manual to be prepared.
16. Product malfunctions caused by unmatched play or control devices that are not provided by Hikvision. If Products are damaged arising out of the aforementioned unmatched devices and require Hikvision's repair, the charging rate shall be as Hikvision's request.
17. If the products are out of the warranty period and the customer still wants to have repair service, the customer shall bear the two-way freight, insurance, tariff, and customs clearance for return delivery of the returned products or parts to Hikvision's RMA center, and also bear the maintenance cost.

6.6 Process for Warranty Service

6.6.1 Remote Service Process

Submit service requirements through the website, email, telephone, and other service channels of Hikvision with the contract number. Specific content of the service and contact information shall be provided.

6.6.2 Process of Returning to RMA Center

Submit service requirements through the website, email, telephone, and other service channels of Hikvision with warranty card or contract number. A packing list of the returned product and postal information to receive the repaired product shall be provided.

Hikvision's postal information is stipulated on Hikvision's website.


Customer instructions:

- 1) Shall provide a brief fault report. The report can be attached to the surface of the repaired item.
- 2) Shall provide packing list, including contract number, model, and quantity of the repaired item.
- 3) Shall provide receipt postal information, including company name, address, consignee, contact information, etc.
- 4) Shall provide required repair parts and repair materials. For example, if the lamp bead is damaged, send the lamp board and replacement lamp bead together. All LED spare parts of board and lamp beads are included with the order.
- 5) To avoid causing damages to the returned products during transportation, please be cautious about the package and protection of the products. Hikvision is not responsible for any damages to the returned products or parts during delivery.

6.7 General Terms

This warranty policy is a standard application of Hikvision. No other third party (including any agent, distributor, or sales representative) is authorized to make any representations or warranties that are different from this warranty policy. Unless otherwise confirmed by Hikvision in written forms of contract or other documents, any warranty clauses that conflict with this warranty policy shall be deemed to be automatically invalid. The final power of interpretation of this warranty policy shall be vested in Hikvision.

In the event of any conflict between this Warranty Policy and Hikvision RMA Policy V5.0, the Hikvision RMA Policy V5.0 shall prevail.

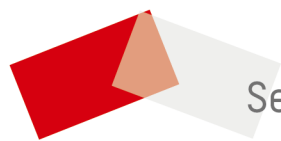

See Far, Go Further